
USB Stack Host Reference Manual

Document Number: USBSHRM

Rev. 1, 04/2015

Contents

Chapter 1	Before You Begin	4
1.1	<i>About this book</i>	4
1.2	<i>Acronyms and abbreviations</i>	4
1.3	<i>Function listing format</i>	4
Chapter 2	Overview	6
2.1	<i>USB overview</i>	6
2.2	<i>Using the USB host API</i>	7
2.3	<i>API overview</i>	9
Chapter 3	USB Host Controller driver APIs	16
3.1	<i>USB host API</i>	16
Chapter 4	USB Host Class APIs	32
4.1	<i>HID class driver APIs</i>	32
4.2	<i>MSD class driver APIs</i>	36
4.3	<i>CDC class driver APIs</i>	42
4.4	<i>PHDC class driver APIs</i>	52
4.5	<i>Audio class driver APIs</i>	55
Chapter 5	USB Host Configuration	66
5.1	<i>Common configure</i>	66
5.2	<i>KHCI configure</i>	68
5.3	<i>EHCI configure</i>	69
Chapter 6	Data Structures	71
6.1	<i>USB host controller driver structures</i>	71
6.2	<i>HID class structures</i>	79
6.3	<i>MSD class structures</i>	80
6.4	<i>CDC class structures</i>	82
6.5	<i>PHDC class structures</i>	85
6.6	<i>AUDIO class structures</i>	88
Chapter 7	OS Adapter	91
7.1	<i>OS adapter overview</i>	91
7.2	<i>API overview</i>	91
Appendix	94

A. *USB host stack tasks*..... 94

Chapter 1 Before You Begin

1.1 About this book

This *USB Stack Host Reference Manual* describes the USB Host driver and the programming interface in the USB Stack.

The audience should be familiar with the following reference material:

- *Universal Serial Bus Specification Revision 1.1*
- *Universal Serial Bus Specification Revision 2.0*

Use this book in addition to:

- *Source Code*

1.2 Acronyms and abbreviations

Table 1 Acronyms and abbreviations

Term	Description
API	Application Programming Interface
CDC	Communication Device Class
HID	Human Interface Device
MSD	Mass Storage Device
PHDC	Personal Healthcare Device Class

1.3 Function listing format

This is the general format of an entry for a function, compiler intrinsic, or a macro.

function_name()

A short description of what function **function_name()** does.

Synopsis

Provides a prototype for function **function_name()**.

```
<return_type> function_name (  
<type_1> parameter_1,  
<type_2> parameter_2,  
...  
<type_n> parameter_n)
```

Parameters

parameter_1 [in] – Pointer to x

parameter_2 [out] – Handle for y

parameter_n [in/out] – Pointer to z

Parameter passing is categorized as follows:

- *In* – indicates that the function uses one or more values in the parameter you give it without storing any changes.
- *Out* – indicates that the function saves one or more values in the parameter you give it. You can examine the saved values to find out useful information about your application.
- *In/out* – indicates the function changes one or more values in the parameter you give it and saves the result. You can examine the saved values to find out useful information about your application.

Description – Describes the function **function_name()**. This section also describes any special characteristics or restrictions that might apply:

- Function blocks or might block under certain conditions
- Function must be started as a task
- Function creates a task
- Function has pre-conditions that might not be obvious
- Function has restrictions or special behavior

Return value – Specifies any value or values returned by function **function_name()**.

See also – Lists other functions or data types related to function **function_name()**.

Example – Provides an example (or a reference to an example) that illustrates the use of function **function_name()**.

Chapter 2 Overview

2.1 USB overview

Universal Serial Bus (USB) is a polled bus. USB Host configures devices attached to it, either directly or through a USB hub, and initiates all bus transactions. USB Device responds only to the requests sent to it by a USB Host.

Because the USB Host manages the attachment and detachment of peripherals along with their power requirements dynamically, all the hardware implementation details can be hidden from applications. The USB Host determines which device driver to load for the connected device, and assigns a unique address to the device for run-time data transfers. The USB Host also manages data transfers and bus bandwidth allocation.

The USB Host software consists of the following:

- USB Host application
- USB Host Class Driver (contains USB Host Class APIs)
- USB Host Common Controller Driver APIs (independent of hardware)
- USB Host controller interface (HCI) - low-level functions used to interact with the USB Host controller hardware
- OS adapter to provide unified OS API to USB Stack
- Board related initialization: USB Host Stack defines a weak function as follow:

```
#ifdef __cplusplus
extern "C" {
#endif

usb_status bsp_usb_host_board_init(uint8_t controller_id);

#ifdef __cplusplus
}
#endif
```

It is called in the process of usb host initialization. Application can rewrite it in C function way to implement the USB host board initialization. The controller_id is the enum CONTROLLER_INDEX.

The whole architecture and components of USB stack as follows:

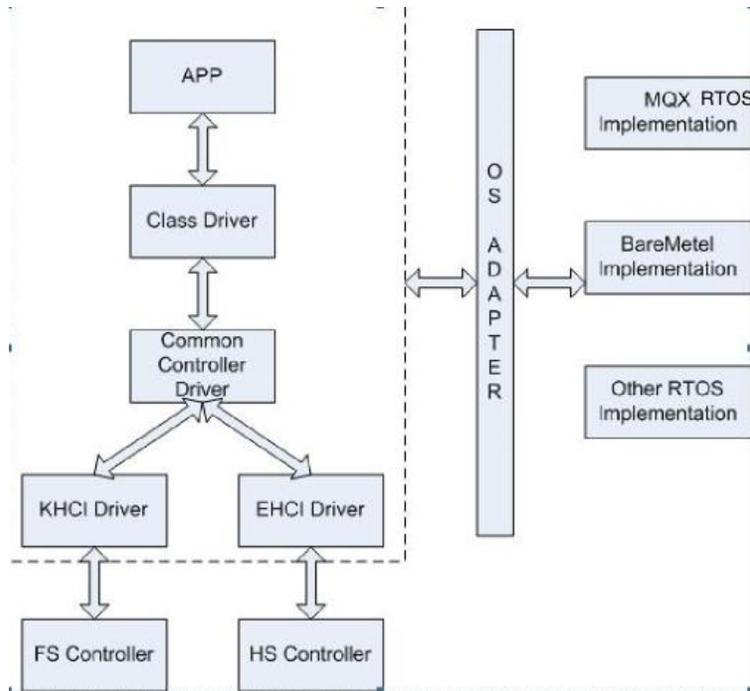


Figure 1 USB Host stack architecture

2.2 Using the USB host API

To use the USB Host API, follow these general steps. Each API function is described in the subsequent chapters.

1. Initialize the USB Host controller interface (`usb_host_init()`).
2. Optionally register services for types of events (`usb_host_register_service()`).
3. Open the pipe for a connected device or devices (`_usb_host_open_pipe()`).
4. Send control packets to configure the device or devices (`usb_host_send_setup()`).
5. Send (`usb_host_send_data()`) and receive (`usb_host_rcv_data()`) data on pipes.
6. If required, cancel a transfer on a pipe (`usb_host_cancel()`).
7. If applicable, unregister services for pipes or types of events (`usb_host_unregister_service()`) and close pipes for disconnected devices (`usb_host_close_pipe()`).
8. Shut down the USB Host controller interface (`usb_host_deinit()`).

Alternatively:

1. Define a table of driver capabilities that the application uses (as follows):

Sample driver information table

```

static usb_host_driver_info_t DriverInfoTable[] =
{
    {
        {0x00,0x00}, /* Vendor ID 1
USB-IF */
        {0x00,0x00}, /* Product
per manufacturer */
        USB_CLASS_HID, /* Class code
        USB_SUBCLASS_HID_BOOT, /* Sub-Class code
        USB_PROTOCOL_HID_MOUSE, /* Protocol
        0, /* Reserv
*/
        usb_host_hid_mouse_event /* Application call b:
function */
    },
    /* USB hub */
    {
        {0x00,0x00}, /* Vendor ID 1
USB-IF */
        {0x00,0x00}, /* Product
per manufacturer */
        USB_CLASS_HUB, /* Class code
        USB_SUBCLASS_HUB_NONE, /* Sub-Class code
        USB_PROTOCOL_HUB_ALL, /* Protocol
        0, /* Reserv
*/
        usb_host_hub_device_event /* Application call b:
function */
    },
    {
        {0x00,0x00}, /* All-zero ent
terminates */
        {0x00,0x00}, /* driver in
list. */
        0,
        0,
        0,
        0,
        NULL
    }
};

```

2. Initialize the USB Host controller interface (usb_host_init()).
3. The application should then register the driver information table to the host stack by calling the usb_host_register_driver_info() host API function.

4. Optionally register services for types of events (`usb_host_register_service()`).
5. Wait for the callback function, which is specified in the driver info table, to be called.
6. Check for the events in the callback function: one of `USB_ATTACH_EVENT`, `USB_DETACH_EVENT`, `USB_CONFIG_EVENT` or `USB_INTF_OPENED_EVENT`.
 - `USB_ATTACH_EVENT`: A newly attached device was just enumerated and a default configuration was selected.
 - `USB_DETACH_EVENT`: The device was detached.
 - `USB_CONFIG_EVENT`: A new configuration was selected on the device.
 - `USB_INTF_OPENED_EVENT`: A new interface was selected on the device.
7. If it is a `USB_CONFIG_EVENT` event, select an interface by calling the host API function `usb_host_open_dev_interface()`.
8. After the `USB_INTF_OPENED_EVENT` event is notified in the callback function, issue class-specific commands by using the class API.
9. If the `USB_DETACH_EVENT` event is notified in the callback function, close an interface by calling the host API function `usb_host_close_dev_interface()`.
10. Open the pipe for a connected device or devices (`usb_host_open_pipe()`).
11. Transfer data by using the host API functions `usb_host_send_data()` and/or `usb_host_recv_data()`.
12. If required, cancel a transfer on a pipe (`usb_host_cancel()`).
13. If applicable, unregister services for types of events (`usb_host_unregister_service()`) and close pipes for disconnected devices (`usb_host_close_pipe()`).
14. Shut down the USB Host controller interface (`usb_host_deinit()`).

2.3 API overview

This section describes the USB Stack Host API functions. The interfaces between USB Common Controller driver and xHCI driver are not listed here. Note that all USB host APIs can't be invoked in interrupt service routine.

Table 2 USB Host controller driver APIs

No.	API function	Description
1	<code>usb_host_init()</code>	Initializes the USB host controller
2	<code>usb_host_deinit()</code>	Un-initializes the host controller
3	<code>usb_host_register_driver_info()</code>	Registers driver information

4	usb_host_register_unsupported_device_notify()	Registers the callback function for unsupported device
5	usb_host_open_dev_interface()	Opens the selected interface
6	usb_host_close_dev_interface()	Closes the selected interface
7	usb_host_open_pipe()	Opens a pipe
8	usb_host_close_pipe()	Closes a pipe
9	usb_host_get_tr()	Gets a valid TR
10	usb_host_release_tr()	Releases a TR
11	usb_host_send_data()	Sends data to a specified endpoint
12	usb_host_send_setup()	Sends the setup data to a specified endpoint
13	usb_host_rcv_data()	Receives data from a specified endpoint
14	usb_host_cancel()	Cancels the TR in a endpoint
15	usb_host_bus_control()	Controls the BUS status
16	usb_host_get_host_handle()	Gets the host handle of the device
17	usb_host_dev_mng_get_address()	Gets a device address
18	usb_host_dev_mng_get_hubno()	Gets the hub index to which the target device attached.
19	usb_host_dev_mng_get_portno()	Gets the hub port index to which the target device attached.
20	usb_host_dev_mng_get_speed()	Gets the target device speed
21	usb_host_dev_mng_get_level()	Gets the hub level of the device
22	usb_host_dev_mng_get_host()	Gets the host handle
23	usb_host_dev_mng_get_control_pipe()	Gets the control pipe of the device
24	usb_host_dev_remove()	Removes the device
25	usb_host_get_dev_descriptor()	Gets the device interface or endpoint descriptor

26	usb_host_open_dev_alternate_interface()	Opens the alternate interface of the device
----	---	---

The following table summarizes the HID class API functions.

Table 3 HID class driver APIs

No.	API function	Description
1	usb_class_hid_init()	Initializes the HID class
2	usb_class_hid_deinit()	Un-initializes the HID class driver
3	usb_class_hid_pre_deinit()	Pre un-initializes the HID class driver
4	usb_class_hid_get_idle()	Reads the idle rate of a particular hid device report
5	usb_class_hid_get_protocol()	Reads the active protocol
6	usb_class_hid_get_report ()	Gets a report from the HID device
7	usb_class_hid_set_idle()	Reads silently a particular report on interrupt in the pipe
8	usb_class_hid_set_protocol()	Switches between the boot protocol and the report protocol
9	usb_class_hid_set_report()	Sends a report to the HID device
10	usb_class_hid_rcv_data()	Reads data from the HID device

The following table summarizes the MSD class API functions.

Table 4 MSD class driver APIs

No.	API function	Description
1	usb_class_mass_init()	Initializes the MSD class
2	usb_class_msss_deinit()	Un-initializes the MSD class driver
3	usb_class_mass_pre_deinit()	Pre un-initializes the MSD class driver
4	usb_class_mass_storage_device_command()	Sends an MSD command to the target device

5	usb_class_mass_storage_device_command_cancel()	Cancels the last MSD command
6	usb_class_mass_getmaxlun_bulk_only()	Gets the number of the logical units on the device
7	usb_class_mass_getvidpid()	Gets the VID and PID of the device
8	usb_class_mass_reset_recovery_on_usb()	Sends the RESET RECOVERY command to the command
9	usb_class_mass_q_init()	Initializes the command queue
10	usb_class_mass_q_insert()	Inserts a command to the queue
11	usb_class_mass_deleteq()	Deletes a command from the queue
12	usb_class_mass_cancelq()	Cancels the current command
13	usb_class_mass_get_pending_request()	Gets the current command
14	usb_mass_ufi_generic()	Initializes a UFI command
15	usb_mass_ufi_cancel()	Cancels a UFI command

The following table summarizes the CDC class API functions.

Table 5 CDC class driver APIs

No.	API function	Description
1	usb_class_cdc_acm_init()	Initializes the CDC class driver for Abstract Class Control
2	usb_class_cdc_acm_deinit()	Un-initializes the CDC class driver for Abstract Class Control
3	usb_class_cdc_acm_pre_deinit()	Pre un-initializes the CDC class driver for Abstract Class Control
4	usb_class_cdc_acm_use_lwevent()	Adds an LW event for Abstract Class Control
5	usb_class_cdc_data_init()	Initializes the class driver for Abstract Class Data

6	<code>usb_class_cdc_data_deinit()</code>	Un-initializes the class driver for Abstract Class Data
7	<code>usb_class_cdc_data_pre_deinit()</code>	Pre un-initializes the CDC class driver for Abstract Class Data
8	<code>usb_class_cdc_data_use_lwevent()</code>	Adds an LW event for Abstract Class Data
9	<code>usb_class_cdc_get_ctrl_interface()</code>	Gets the registered control interface
10	<code>usb_class_cdc_get_data_interface()</code>	Gets the registered data interface
11	<code>usb_class_cdc_get_acm_line_coding()</code>	Gets parameters of the current line (baudrate, HW control)
12	<code>usb_class_cdc_set_acm_line_coding()</code>	Sets parameters of the current line (baudrate, HW control)
13	<code>usb_class_cdc_get_acm_descriptors()</code>	Searches for descriptors in the device configuration and fills back fields if the descriptor is found
14	<code>usb_class_cdc_set_acm_descriptors()</code>	Sets descriptors for the ACM interface
15	<code>usb_class_cdc_get_ctrl_descriptor()</code>	Gets descriptor of the control interface
16	<code>usb_class_cdc_bind_data_interfaces()</code>	Binds all data interfaces belonging to the ACM control instance
17	<code>usb_class_cdc_unbind_data_interfaces()</code>	Un-binds all data interfaces belonging to the ACM control instance
18	<code>usb_class_cdc_bind_acm_interfaces()</code>	Binds data interfaces belonging to the control interface
19	<code>usb_class_cdc_unbind_acm_interfaces()</code>	Un-binds data interfaces belonging to the control interface
20	<code>usb_class_cdc_init_ipipe()</code>	Starts interrupt endpoint to poll for interrupt on specified device
21	<code>usb_class_cdc_intf_validate()</code>	Determines whether the class interface is validated

The following table summarizes the PHDC class API functions.

Table 6 PHDC class driver APIs

No.	API Function	Description
1	usb_class_phdc_init()	Initializes the PHDC class
2	usb_class_phdc_deinit()	Un-initializes the PHDC class driver
3	usb_class_phdc_pre_deinit()	Pre un-initializes the PHDC class driver
4	usb_class_phdc_recv_data()	Receives data from either a bulk-in or an interrupt pipe
5	usb_class_phdc_send_control_request()	Sends a PHDC class specific request
6	usb_class_phdc_send_data()	Send data to a PHDC device through a bulk-out pipe.
7	usb_class_phdc_set_callbacks()	Registers application callback pointers to the current PHDC interface

The following table summarizes the AUDIO class API functions.

Table 7 AUDIO class driver APIs

No.	API function	Description
1	usb_class_audio_control_init()	Initializes the audio control interface
2	usb_class_audio_control_deinit()	Un-initializes the audio control interface
3	usb_class_audio_control_pre_deinit()	Pre un-initializes the audio control interface
4	usb_class_audio_stream_init()	Initializes the audio data interface
5	usb_class_audio_stream_deinit()	Un-initializes the audio data interface
6	usb_class_audio_stream_pre_deinit()	Pre un-initializes the audio data interface
7	usb_class_audio_control_get_descriptors()	Searches for descriptors of the audio control interface

8	<code>usb_class_audio_control_set_descriptors()</code>	Sets descriptors for the audio control interface
9	<code>usb_class_audio_stream_get_descriptors()</code>	Searches for descriptors of the audio stream interface
10	<code>usb_class_audio_stream_set_descriptors()</code>	Sets descriptors for the audio stream interface
11	<code>usb_class_audio_cntrl_common()</code>	Sends data through the control interface
12	<code>usb_class_audio_cntrl_callback()</code>	Controls interface callback
13	<code>usb_class_audio_recv_data()</code>	Receives data through the data interface
14	<code>usb_class_audio_recv_callback()</code>	Receives callback through the data interface
15	<code>usb_class_audio_send_data()</code>	Sends data through the data interface
16	<code>usb_class_audio_send_callback()</code>	Sends callback through the data interface
17	<code>usb_class_audio_get_alternative_interface_descriptors_and_sync()</code>	Gets endpoint descriptor of the interface and fills the endpoint structure.

Chapter 3 USB Host Controller driver APIs

3.1 USB host API

There are several kinds of USB classes supported in the USB Host stack. Maybe not all of them need to be supported in one specific USB example. For example, a HID mouse example may only be interested in the HID class device and HUB. The APP must register the class driver information to the USB stack so that the USB stack knows which class device the APP wants to manage. An event handler callback must be provided to USB stack so that the device's attach/detach/configuration events can be notified to APP by the USB stack.

In addition, to let the APP know about the detailed information about an attached unsupported device, `usb_host_register_unsupported_device_notify` is provided so that the APP can get the detailed unsupported interface information.

3.1.1 `usb_host_init`

Synopsis

```
usb_status usb_host_init
(
    uint8_t controller_id,
    usb_host_handle * handle
)
```

Parameters

`controller_id` [in] – controller ID
USB_CONTROLLER_KHCI_0 = 0x00
USB_CONTROLLER_KHCI_1
USB_CONTROLLER_EHCI_0
USB_CONTROLLER_EHCI_1handle
[out] – host handle, refer to [6.1.7](#)

Description

The function calls an HCI function to initialize the USB Host hardware and install an ISR that services all interrupt sources on the USB Host hardware.

The function also allocates and initializes all internal host-specific data structures and USB Host internal data and returns a USB Host controller handle for subsequent use with other USB Host API functions.

Return Value

USB_OK (success)

Others (failure)

3.1.2 usb_host_deinit

Synopsis

```
usb_status usb_host_deinit
(
    usb_host_handle * handle
)
```

Parameters

handle [in] – host handle

Description

The function calls an HCI function to stop the specified USB Host controller. Call the function when the services of the USB Host controller are no longer required, or if the USB Host controller needs to be reconfigured.

Return Value

USB_OK (success)

Others (failure)

3.1.3 usb_host_register_driver_info

Synopsis

```
usb_status usb_host_register_driver_info
(
    usb_host_handle * handle,
    void* info_table_ptr
)
```

Parameters

handle [in] – USB host

info_table_ptr [in] – Device info table, refer to [6.1.5](#)

Description

This function is used by the application to register a driver for a device with a particular vendor ID, product ID, class, subclass, and protocol code.

Return Value

USB_OK (success)

Others (failure)

Data structure

```
typedef struct driver_info
{
    uint8_t idVendor[2]; /* Vendor ID per USB-IF */
}
```

```

uint8_t      idProduct[2];      /* Product ID per manufacturer */
uint8_t      bDeviceClass;      /* Class code, 0xFF if any */
uint8_t      bDeviceSubClass;   /* Sub-Class code, 0xFF if any */
uint8_t      bDeviceProtocol;   /* Protocol, 0xFF if any */
uint8_t      reserved;         /* Alignment padding */
event_callback attach_call;
} USB_HOST_DRIVER_INFO, * USB_HOST_DRIVER_INFO_PTR;

```

Note: For the `attach_call` callback function, the following events are sent to APP by this callback function in current implementation:

- **USB_ATTACH_EVENT**
A device attached and a valid interface which matches the registered information by APP are provided
- **USB_CONFIG_EVENT**
The device is configured and all the valid interfaces which match the registered information by APP are provided. The APP can select an interface from these interfaces as the one to be enabled.
- **USB_INTF_OPENED_EVENT**
The selected interface is enabled, and the APP can call the class driver interface to do anything.
- **USB_DETACH_EVENT**
The attached device is detached.

In the future, the following event may be added:

- **USB_REMOTE_WAKEUP**
The USB BUS is waked up by a remote device.
- **USB_SUSPENDED**
The USB BUS is suspended.
- **USB_WAKEUP**
The USB BUS is waked up from suspended state (not from remote device but from host side).

3.1.4 `usb_host_register_unsupported_device_notify`

Synopsis

```

usb_status usb_host_register_unsupported_device_notify
(
    usb_host_handle * handle,
    event_callback      unsupported_device_notify
)

```

Parameters

handle [in] – USB host
unsupported_device_notify [in] – callback function to get the unsupported device notification

Description

This function is used by the application to register a callback function to get all the information of unsupported device.

Return Value

USB_OK (success)

Others (failure)

Data structure

```
typedef void (_CODE_PTR_ event_callback)(usb_device_instance_handle,  
usb_interface_descriptor_handle intf_handle, uint32_t event_code);
```

If event_code is USB_ATTACH_INTF_NOT_SUPPORT, then intf_handle is a pointer point to [USB_DEVICE_INTERFACE_STRUCT](#)

If event_code is USB_ATTACH_DEVICE_NOT_SUPPORT, then both the device handle and interface handle are NULL.

3.1.5 usb_host_open_dev_interface

Synopsis

```
usb_status usb_host_open_dev_interface  
(  
usb_host_handle handle,  
usb_device_instance_handle dev_handle,  
usb_interface_descriptor_handle intf_handle,  
usb_usb_class_handle * usb_class_handle_ptr  
)
```

Parameters

handle [in] – USB host handle
dev_handle [in] – attached device handle
intf_handle [in] – interface handle to be opened
usb_class_handle_ptr [out] – class handle associated to the interface

Description

This function is used by the application to open the selected interface, and the corresponding class driver handle will be obtained through the usb_class_handle_ptr parameter that can be used for the following transfer.

Return Value

USB_OK (success)

Others (failure)

3.1.6 usb_host_close_dev_interface

Synopsis

```
usb_status usb_host_close_dev_interface
(
    usb_host_handle                handle,
    usb_device_instance_handle     dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_usb_class_handle           usb_usb_class_handle
)
```

Parameters

handle [in] – USB host handle

dev_handle [in] – attached device handle

intf_handle [in] – interface handle to be closed

usb_usb_class_handle [in] – class handle associated to the interface

Description

This function is used by the application to close the selected interface. For the detailed information for this API, see Section 4.4.

Return Value

USB_OK (success)

Others (failure)

3.1.7 usb_host_open_pipe

Synopsis

```
usb_status usb_host_open_pipe
(
    usb_host_handle                handle,
    usb_pipe_handle *              pipe_handle_ptr,
    pipe_init_struct_t*            pipe_init_ptr
)
```

Parameters

handle [in] – USB host handle

pipe_handle_ptr [out] – returned pipe handle, refer to Section [6.1.4](#)

pipe_init_ptr [in] – parameter to initialize the pipe, refer to Section [6.1.3](#)

Description

This function is used by the application to open a pipe. The pipe detailed information is included in the pipe_init_ptr, and it points to PIPE_INIT_STRUCT.

Return Value

USB_OK (success)

Others (failure)

Data structure

```
typedef struct pipe_init_struct
{
    void*                dev_instance;
    uint32_t             flags;
    uint16_t             max_packet_size;
    uint16_t             nak_count;
    uint8_t              interval;
    uint8_t              endpoint_number;
    uint8_t              direction;
    uint8_t              pipetype;
}
pipe_init_struct_t;
```

3.1.8 usb_host_close_pipe

Synopsis

```
usb_status usb_host_close_pipe
(
    usb_host_handle     handle,
    usb_pipe_handle     pipe_handle_ptr,
)
```

Parameters

handle [in] – USB host handle

pipe_handle [in] – pipe handle

Description

This function is used by the application to close an opened pipe so that the pipe resource can be free.

Return Value

USB_OK (success)

Others (failure)

3.1.9 usb_host_get_tr

Synopsis

```
usb_status usb_host_get_tr
(
    usb_host_handle     handle,
    tr_callback         callback,
    void*               callback_param,
    tr_struct_t*        tr_ptr_ptr
)
```

)

Parameters

handle	[in] – USB host handle
callback	[in] – callback function that will be called when TR completed
callback_param	[in] – callback parameter to the callback function
tr_ptr_ptr	[out] – return the pointer to TR, refer to Section 6.1.2

Description

This function is used by the application to get a valid TR that will be used in the following transfer. Meanwhile, the TR callback and callback parameter are provided to be initialized.

Return Value

USB_OK (success)

Others (failure)

Data structure

```
typedef struct tr_struct
{
    struct tr_struct*      next;
    uint32_t               status;
    uint32_t               tr_index;          /* Transfer number on this pipe */
    uint8_t *              tx_buffer;        /* Address of buffer containing the
data to be transmitted (including OUT data phase of control transfers) */
    uint8_t *              rx_buffer;        /* Address of buffer to receive data
*/
    uint32_t               tx_length;        /* Length of data to transmit. For
control transfers, the length of data for the data phase */
    uint32_t               rx_length;        /* Length of data to be received.
For control transfers, this indicates the length of data for the data phase */
    bool                   send_phase;      /* Second phase of setup packet: Send/Receive
*/
    usb_setup_t            setup_packet;     /* Setup packet raw data */
    uint32_t               transfered_length;
    tr_callback            callback;         /* The callback function to be invoked
when a transfer is completed or an error is to be reported */
    void*                  callback_param;   /* The second parameter to be passed
into the callback function when it is invoked */
    void*                  hw_transaction_head; /* used only for EHCI */
    void*                  hw_transaction_tail; /* used only for EHCI */
    uint8_t                occupied;
    uint8_t                setup_status;
    uint8_t                no_of_itds_sitds;
    uint8_t                setup_first_phase;
} tr_struct_t;
```

3.1.10 usb_host_release_tr

Synopsis

```
usb_status usb_host_release_tr
(
    usb_host_handle          handle,
    tr_struct_t**           tr_ptr
)
```

Parameters

handle [in] – USB host handle
tr_ptr [in] – pointer to TR to be released

Description

This function is used by the application to release a TR so that the TR resource can be free in the USB stack.

Return Value

USB_OK (success)
Others (failure)

3.1.11 usb_host_send_data

Synopsis

```
usb_status usb_host_send_data
(
    usb_host_handle          handle,
    usb_pipe_handle         pipe_handle,
    tr_struct_t*            tr_ptr
)
```

Parameters

handle [in] – USB host handle
pipe_handle [in] – pipe handle
tr_ptr [in] – pointer to TR

Description

This function is used by the application to send data through target pipe that is assigned by the pipe_handle parameter. The detailed data about the address, the length, the transfer type is assigned in the TR structure.

Return Value

USB_OK (success)
Others (failure)

3.1.12 usb_host_send_setup

Synopsis

```
usb_status usb_host_send_setup
(
usb_host_handle          handle,
usb_pipe_handle         pipe_handle,
tr_struct_t*            tr_ptr
)
```

Parameters

handle [in] – USB host handle
pipe_handle [in] – pipe handle
tr_ptr [in] – pointer to TR

Description

This function is used by the application to send a setup through target pipe, which is always the control pipe 0.

Return Value

USB_OK (success)
Others (failure)

3.1.13 usb_host_rcv_data

Synopsis

```
usb_status usb_host_rcv_data
(
usb_host_handle          handle,
usb_pipe_handle         pipe_handle,
tr_struct_t*            tr_ptr
)
```

Parameters

handle [in] – USB host handle
pipe_handle [in] – pipe handle
tr_ptr [in] – pointer to TR

Description

This function is used by the application to receive data through the target pipe that is assigned by the pipe_handle parameter. The detailed data about the address, the length, the transfer type is assigned in the TR structure.

Return Value

USB_OK (success)

Others (failure)

3.1.14 usb_host_cancel

Synopsis

```
usb_status usb_host_cancel
(
    usb_host_handle          handle,
    usb_pipe_handle         pipe_handle,
    tr_struct_t*            tr_ptr
)
```

Parameters

handle [in] – USB host handle
pipe_handle [in] – pipe handle
tr_ptr [in] – pointer to TR

Description

This function is used by the application to cancel all the uncompleted TRs in a target pipe.

Note: There is no API provided by the stack to cancel a specific TR in a target pipe. The tr_ptr parameter is not used in this API now, but we can extend this API in the future to cancel a specific TR, so we keep tr_ptr parameter here.

Return Value

USB_OK (success)
Others (failure)

3.1.15 usb_host_bus_control

Synopsis

```
usb_status usb_host_bus_control
(
    usb_host_handle          handle,
    uint8_t                  bcontrol
)
```

Parameters

handle [in] – USB host handle
bcontrol [in] – control code of the BUS

Description

This function is used by the application to control the BUS status, for example, to suspend the BUS or resume the BUS. Currently this function is not implemented yet.

Return Value

USB_OK (success)

Others (failure)

3.1.16 usb_host_get_host_handle

Synopsis

```
usb_status usb_host_get_host_handle  
(  
    usb_device_instance_handle dev_handle,  
    usb_host_handle            * handle  
);
```

Parameters

dev_handle [in] – attached device handle

handle [out] – USB host handle

Description

This function is used by the application to get the host handle of the device.

Return Value

USB_OK (success)

Others (failure)

3.1.17 usb_host_dev_mng_get_address

Synopsis

```
uint8_t usb_host_dev_mng_get_address  
(  
    usb_device_instance_handle dev_handle  
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get the USB address of the target attached device.

Return Value

USB address of the device (success)

0 (failure)

3.1.18 usb_host_dev_mng_get_hubno

Synopsis

```
uint8_t  usb_host_dev_mng_get_hubno
(
usb_device_instance_handle  dev_handle
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get the hub index to which the target device attached.

Return Value

Hub index of the device (success)

0xFF (failure)

3.1.19 usb_host_dev_mng_get_portno

Synopsis

```
uint8_t  usb_host_dev_mng_get_portno
(
usb_device_instance_handle  dev_handle
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get the hub port index to which the target device attached.

Return Value

Port number of the device (success)

0xFF (failure)

3.1.20 usb_host_dev_mng_get_speed

Synopsis

```
uint8_t  usb_host_dev_mng_get_speed
(
usb_device_instance_handle  dev_handle
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get the speed of the target device.

Return Value

Speed of the device: 0 for full speed, 1 for low speed and 2 for high speed (success)

0xFF (failure)

3.1.21 usb_host_dev_mng_get_level

Synopsis

```
uint8_t  usb_host_dev_mng_get_level
(
  usb_device_instance_handle  dev_handle
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get hub level of the target device attached.

Return Value

Hub level of the device (success)

0xFF (failure)

3.1.22 usb_host_dev_mng_get_host

Synopsis

```
usb_host_handle  usb_host_dev_mng_get_host
(
  usb_device_instance_handle  dev_handle
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get host handler of the target device.

Return Value

Host handler of the device (success)

NULL (failure)

3.1.23 usb_host_dev_mng_get_control_pipe

Synopsis

```
usb_pipe_handle  usb_host_dev_mng_get_control_pipe
(
```

```
usb_device_instance_handle dev_handle
)
```

Parameters

dev_handle [in] – attached device handle

Description

This function is used by the application to get the control pipe handler of the target device.

Return Value

Control pipe handler of the device (success)

NULL (failure)

3.1.24 usb_host_dev_remove

Synopsis

```
usb_status usb_host_dev_remove
(
usb_host_handle handle,
usb_device_instance_handle dev_handle
)
```

Parameters

handle [in] – USB host handle

dev_handle [in] – attached device handle

Description

This function is used by the application to remove device. This function should not be used in normal situation, user need to be clear about the function when calling it.

Return Value

USB_OK (success)

Others (failure)

3.1.25 usb_host_get_dev_descriptor

Synopsis

```
usb_status usb_host_get_dev_descriptor
(
usb_interface_descriptor_handle intf_handle,
uint8_t descriptor_type,
uint32_t* param1,
uint32_t* param2,
)
```

```

        void**                descriptor
    )

```

Parameters

`intf_handle` [in] – Interface to be selected

`descriptor_type` [in] – The descriptor type, such as `USB_DESC_TYPE_EP` and `USB_DESC_TYPE_IF`

`param1` [in] – For `USB_DESC_TYPE_EP`, The length of alternate setting interface descriptor. For `USB_DESC_TYPE_IF`, bit [0-7] is alternate setting value, bit[8-15] is interface number.

`param2` [out] – The length of interface descriptor

`descriptor` [out] – The interface or endpoint descriptor wanted to get.

Description

This function is used by the application to get device interface or endpoint descriptor.

Return Value

`USB_OK` (success)

Others (failure)

3.1.26 `usb_host_open_dev_alternate_interface`

Synopsis

```

usb_status  usb_host_open_dev_alternate_interface
(
    usb_host_handle          handle,
    usb_device_instance_handle dev_handle,
    usb_interface_descriptor_handle intf_handle,
    uint8_t                  alternate_setting
)

```

Parameters

`handle` [in] – USB host handle

`dev_handle` [in] – attached device handle

`intf_handle` [in] – The interface wanted to be opened

`alternate_setting` [in] – The interface alternate setting

Description

This function is used by the application to open the alternate setting interface.

Return Value

USB_OK (success)

Others (failure)

Chapter 4 USB Host Class APIs

4.1 HID class driver APIs

4.1.1 usb_class_hid_init

Synopsis

```
usb_status usb_class_hid_init
(
    usb_device_instance_handle    dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_class_handle*             class_handle_ptr
)
```

Parameters

dev_handle [in] – device handle
intf_handle [in] – interface handle
class_handle_ptr [out] – class driver’s handle, refer to Section [6.2.1](#)

Description

This function is used to initialize the corresponding class driver, and it is not called by the APP directly. The class driver’s init/deinit functions are included in the global interface map table. When corresponding interface is opened by `usb_host_open_dev_interface`, the init function will be called automatically and the class driver’s handle will be returned.

4.1.2 usb_class_hid_deinit

Synopsis

```
usb_status usb_class_hid_deinit
(
    usb_class_handle              handle
)
```

Parameters

handle [in] – class driver’s handle

Description

This function is used to de-initialize a class driver handle.

This function is not called by the APP directly. It will be called when the USB host application call the `usb_host_close_dev_interface()` function.

4.1.3 usb_class_hid_pre_deinit

Synopsis

```
usb_status usb_class_hid_pre_deinit
(
```

```
usb_class_handle          handle
)
```

Parameters

handle [in] – class driver's handle

Description

This function is used to do some pre de-initialization operation, such as cancelling all the uncompleted transfers. This function is not called by the APP directly, and it will be included in a global class interface table so that it can be called automatically when the device detached.

4.1.4 usb_class_hid_get_idle

Synopsis

```
usb_status usb_class_hid_get_idle
(
hid_command_t* com_ptr,
uint8_t          rid,
uint8_t *       idle_rate
)
```

Parameters

com_ptr [in] – class interface structure pointer, refer to Section [6.2.2](#)

rid [in] – report ID (see HID specification)

idle_rate [out] – idle rate of this report

Description

This function is called by the application to read the idle rate of a particular HID device report.

Return Value

USB_OK (success)

Others (failure)

4.1.5 usb_class_hid_get_protocol

Synopsis

```
usb_status usb_class_hid_get_protocol
(
hid_command_t* com_ptr,
uint8_t *      protocol
)
```

Parameters

com_ptr [in] – class interface structure pointer

protocol [out] – protocol (1 byte, 0 = Boot Protocol or 1 = Report Protocol)

Description

This function is called by the application to read the the active protocol.

Return Value

USB_OK (success)

Others (failure)

4.1.6 usb_class_hid_get_report

Synopsis

```
usb_status usb_class_hid_get_report
(
  hid_command_t* com_ptr,
  uint8_t          rid,
  uint8_t          rtype,
  void*           buf,
  uint16_t         blen
)
```

Parameters

com_ptr [in] – class interface structure pointer
rid [in] – report ID (see HID specification)
rtype [in] – report type (see HID specification)
buf [out] – buffer to receive report data
blen [in] – length of the buffer

Description

This function is called by the application to get a report from the HID device.

Return Value

USB_OK (success)

Others (failure)

4.1.7 usb_class_hid_set_idle

Synopsis

```
usb_status usb_class_hid_set_idle
(
  hid_command_t* com_ptr,
  uint8_t          rid,
  uint8_t *        duration
)
```

Parameters

com_ptr [in] – class interface structure pointer

rid [in] – report ID (see HID specification)
duration [in] – duration of the idle

Description

This function is called by the application to set the idle rate of a particular HID device report.

Return Value

USB_OK (success)
Others (failure)

4.1.8 usb_class_hid_set_protocol

Synopsis

```
usb_status usb_class_hid_set_protocol  
(  
hid_command_t* com_ptr,  
uint8_t protocol  
)
```

Parameters

com_ptr [in] – class interface structure pointer
protocol [in] – protocol (1 byte, 0 = Boot Protocol or 1 = Report Protocol)

Description

This function is called by the application to switches between the boot protocol and the report protocol.

Return Value

USB_OK (success)
Others (failure)

4.1.9 usb_class_hid_set_report

Synopsis

```
usb_status usb_class_hid_set_report  
(  
hid_command_t* com_ptr,  
uint8_t rid,  
uint8_t rtype,  
void* buf,  
uint16_t blen  
)
```

Parameters

com_ptr [in] – class interface structure pointer
rid [in] – report ID (see HID specification)

rtype [in] – report type (see HID specification)
buf [in] – buffer to send report data
blen [in] – length of the buffer

Description

This function is called by the application to send a report to the HID.

Return Value

USB_OK (success)

Others (failure)

4.2 MSD class driver APIs

4.2.1 usb_class_mass_init

Synopsis

```
usb_status usb_class_mass_init  
(  
    usb_device_instance_handle dev_handle,  
    usb_interface_descriptor_handle intf_handle,  
    usb_class_handle* class_handle_ptr  
)
```

Parameters

dev_handle [in] – device handle
intf_handle [in] – interface handle
class_handle_ptr [out] – the class driver's handle, refer to Section [6.3.1](#)

Description

This function is used to initialize the corresponding class driver, and it is not called by the APP directly. The class driver's init/deinit functions are included in the global interface map table. When the corresponding interface is opened by `usb_host_open_dev_interface`, the initialization function will be called automatically and the class driver's handle will be returned.

4.2.2 usb_class_mass_deinit

Synopsis

```
usb_status usb_class_mass_deinit  
(  
    usb_class_handle handle  
)
```

Parameters

handle [in] – class driver's handle

Description

This function is used to de-initialize a class driver handle,

This function is not called by the APP directly. It will be called when the USB host application call the `usb_host_close_dev_interface()` function.

4.2.3 usb_class_mass_pre_deinit

Synopsis

```
usb_status usb_class_mass_pre_deinit
(
    usb_class_handle          handle
)
```

Parameters

handle [in] – class driver's handle

Description

This function is used to do some pre de-initialization operation, such as cancelling all the uncompleted transfer. This function is not called by the APP directly, and it will be included in a global class interface table so that it can be called automatically when the device detached.

4.2.4 usb_class_mass_storage_device_command

Synopsis

```
usb_status usb_class_mass_storage_device_command
(
    mass_command_struct_t*      cmd_ptr
)
```

Parameters

cmd_ptr [in] – command, refer to refer to Section [6.3.2](#)

Description

This function is called by the protocol layer to execute the command defined in protocol API.

Return Value

USB_OK- Command has been successfully queued in class driver queue (or has been passed to USB, if there is no other command pending).

Others (failure)

4.2.5 usb_class_mass_storage_device_command_cancel

Synopsis

```
bool usb_class_mass_storage_device_command_cancel
(
    mass_command_struct_t*      cmd_ptr
)
```

Parameters

cmd_ptr [in] – command

Description

This function de-queues the command in the class driver queue.

Return Value

USB_OK- Command has been successfully de-queued in the class driver queue.

Others (failure)

4.2.6 usb_class_mass_getmaxlun_bulkonly

Synopsis

```
usb_status usb_class_mass_getmaxlun_bulkonly
(
usb_class_handle          handle,
uint8_t *                pLUN,
tr_callback              callback,
void*                    callback_param
)
```

Parameters

handle [in] – class driver's handle
pLUN [out] – pointer to Logical Unit Number (LUN)
callback [in] – callback upon completion
callback_param [in] – callback parameter

Description

This is a class specific command. This command is used to get the number of logical units on the device. Caller will use the LUN number to direct the commands (as a part of CBW).

Return Value

USB_OK- Command has been successfully queued in class driver queue (or has been passed to USB, if there is no other command pending).

Others (failure)

4.2.7 usb_class_mass_getvidpid

Synopsis

```
usb_status usb_class_mass_getvidpid
(
usb_class_handle          handle,
uint16_t *               vid,
uint16_t *               pid
)
```

Parameters

handle [in] – the class driver’s handle
vid [out] – vendor ID
pid [out] – Product ID

Description

This function is used to get device’s vid and pid.

Return Value

USB_OK - success.

Others (failure)

4.2.8 usb_class_mass_reset_recovery_on_usb

Synopsis

```
usb_status usb_class_mass_reset_recovery_on_usb  
(  
    usb_mass_class_struct_t *    mass_class)
```

Parameters

mass_class [in] – the class driver’s handle

Description

This function gets the pending request from class driver queue and sends the RESET command on control pipe. This function is called when a phase of the pending command fails and class driver decides to reset the device. If there is no pending request in the queue, it will just return. This routine registers a call back for control pipe commands to ensure that pending command is queued again.

Return Value

USB_OK - success.

Others (failure)

4.2.9 usb_class_mass_q_init

Synopsis

```
void usb_class_mass_q_init  
(  
    usb_mass_class_struct_t *    mass_class)
```

Parameters

mass_class [in] – the class driver’s handle

Description

This function initializes a mass storage class command queue.

4.2.10 `usb_class_mass_q_insert`

Synopsis

```
int32_t usb_class_mass_q_insert
(
    usb_mass_class_struct_t *          mass_class,
    mass_command_struct_t*            pCmd
)
```

Parameters

`mass_class` [in] – the class driver's handle
`pCmd` [in] - Command

Description

This function is called by class driver to insert a command in the queue.

Return Value

The index which inserted in queue.

4.2.11 `usb_class_mass_deleteq`

Synopsis

```
void usb_class_mass_deleteq
(
    usb_mass_class_struct_t *          mass_class,
)
```

Parameters

`mass_class` [in] – the class driver's handle

Description

This function is called by class driver to delete all pending commands from the queue.

4.2.12 `usb_class_mass_cancelq`

Synopsis

```
bool usb_class_mass_cancelq
(
    usb_mass_class_struct_t *          mass_class,
    mass_command_struct_t*            pCmd
)
```

Parameters

mass_class [in] – the class driver’s handle
pCmd [in] - Command

Description

This function is called by class driver to cancel a command in the queue.

Return Value

TRUE – Canceled.

FALSE – failed (May be not found the command)

4.2.13 usb_class_mass_get_pending_request

Synopsis

```
void usb_class_mass_get_pending_request  
(  
    usb_mass_class_struct_t *          mass_class,  
    mass_command_struct_t* *          cmd_ptr_ptr  
)
```

Parameters

mass_class [in] – the class driver’s handle
cmd_ptr_ptr [out] - Command

Description

This function is called by class driver to get a command from the queue.

4.2.14 usb_mass_ufi_generic

Synopsis

```
usb_status usb_mass_ufi_generic  
(  
    mass_command_struct_t*          cmd_ptr,  
    uint8_t                        opcode,  
    uint8_t                        lun,  
    uint32_t                        lbaddr,  
    uint32_t                        blen,  
    uint8_t                        cbwflags,  
    uint8_t *                       buf,  
    uint32_t                        buf_len  
)
```

Parameters

cmd_ptr [in] – Command handle

opcode	[in] – Command code
lun	[in] – Logical unit number of command block
lbaddr	[in] - Logical block address
blen	[in] - Block length
cbwflags	[in] – Command block wrapper flags
buf	[in/out] - Transfer buffer address
buf_len	[in] - Transfer buffer length

Description

This function is used to initialize a command transfer.

Return Value

USB_OK- Command has been successfully queued in class driver queue (or has been passed to USB, if there is no other command pending).

Others (failure)

4.2.15 usb_mass_ufi_cancel

Synopsis

```
bool usb_mass_ufi_cancel
(
    mass_command_struct_t*          cmd_ptr
)
```

Parameters

cmd_ptr [in] - Command

Description

This function is used to cancel a command in the queue.

Return Value

TRUE – Canceled.

FALSE – failed (May be not found the command)

4.3 CDC class driver APIs

4.3.1 usb_class_cdc_acm_init

Synopsis

```

usb_status usb_class_cdc_acm_init
(
usb_device_instance_handle      dev_handle,
usb_interface_descriptor_handle intf_handle,
usb_class_handle*                class_handle_ptr
)

```

Parameters

dev_handle [in] – device handle
 intf_handle [in] – interface handle
 class_handle_ptr [out] – the class driver’s handle, refer to [6.4.1](#)

Description

This function is used to initialize the corresponding class driver, it is not called by the APP directly, normally, the class driver’s init/deinit functions are included in the global interface map table. When corresponding interface is opened by usb_host_open_dev_interface, the init function will be called automatically and the class driver’s handle will be returned.

4.3.2 usb_class_cdc_acm_deinit

Synopsis

```

usb_status usb_class_cdc_acm_deinit
(
usb_class_handle      handle
)

```

Parameters

handle [in] – the class driver’s handle

Description

This function is used to deinit a class driver handle,
 This function is not called by the APP directly. It will be called when the USB host application call the usb_host_close_dev_interface() function.

4.3.3 usb_class_cdc_acm_pre_deinit

Synopsis

```

usb_status usb_class_cdc_acm_pre_deinit
(
usb_class_handle      handle
)

```

Parameters

handle [in] – the class driver’s handle

Description

This function is used to do some pre deinit operation like cancel all the uncompleted transfer. This function is not called by the APP directly, it will be included in a global class interface table so that it can be called automatically when the device detached.

4.3.4 usb_class_cdc_acm_use_lwevent

Synopsis

```
usb_status usb_class_cdc_acm_use_lwevent
(
cdc_class_call_struct_t *      ccs_ptr,
os_event_handle                acm_event
)
```

Parameters

ccs_ptr [in] – acm call struct pointer
acm_event [in] – acm event

Description

This function is injector of event that is used in the class but the destruction is allowed only in task context..

Return Value

USB_OK- event is successfully injected.

Others (failure)

4.3.5 usb_class_cdc_data_init

Synopsis

```
usb_status usb_class_cdc_data_init
(
usb_device_instance_handle      dev_handle,
usb_interface_descriptor_handle intf_handle,
usb_class_handle*              usb_class_handle_ptr
)
```

Parameters

dev_handle [in] – device handle
intf_handle [in] – interface handle
usb_class_handle_ptr [out] – the class driver's handle, refer to [6.4.2](#)

Description

This function is used to initialize the corresponding class driver, it is not called by the APP directly, normally, the class driver's init/deinit functions are included in the global interface map table. When corresponding interface is opened by usb_host_open_dev_interface, the init function will be called automatically and the class driver's handle will be returned.

4.3.6 usb_class_cdc_data_deinit

Synopsis

```
usb_status usb_class_cdc_data_deinit
(
    usb_class_handle          handle
)
```

Parameters

handle [in] – the class driver's handle

Description

This function is used to deinit a class driver handle,

This function is not called by the APP directly. It will be called when the USB host application call the usb_host_close_dev_interface() function.

4.3.7 usb_class_cdc_data_pre_deinit

Synopsis

```
usb_status usb_class_cdc_data_pre_deinit
(
    usb_class_handle          handle
)
```

Parameters

handle [in] – the class driver's handle

Description

This function is used to do some pre deinit operation like cancel all the uncompleted transfer. This function is not called by the APP directly, it will be included in a global class interface table so that it can be called automatically when the device detached.

4.3.8 usb_class_cdc_data_use_lwevent

Synopsis

```
usb_status usb_class_cdc_data_use_lwevent
(
    cdc_class_call_struct_t *    ccs_ptr,
    os_event_handle             data_event
)
```

Parameters

ccs_ptr [in] – data call struct pointer

data_event [in] – data event

Description

This function is injector of events that are used in the class but the destruction are allowed only in task context..

Return Value

USB_OK- events are successfully injected.

Others (failure)

4.3.9 usb_class_cdc_get_ctrl_interface

Synopsis

```
cdc_class_call_struct_t * usb_class_cdc_get_ctrl_interface
(
    void *          intf_handle
)
```

Parameters

intf_handle [in] – pointer to interface handle

Description

This function is used to find registered control interface in the chain.

Return Value

control interface instance

4.3.10 usb_class_cdc_get_data_interface

Synopsis

```
cdc_class_call_struct_t * usb_class_cdc_get_data_interface
(
    void *          intf_handle
)
```

Parameters

intf_handle [in] – pointer to interface handle

Description

This function is used to find registered data interface in the chain.

Return Value

data interface instance

4.3.11 usb_class_cdc_get_acm_line_coding

Synopsis

```
usb_status usb_class_cdc_get_acm_line_coding
(
    cdc_class_call_struct_t *          ccs_ptr,
    usb_cdc_uart_coding_t *          uart_coding_ptr
)
```

)

Parameters

ccs_ptr [in] – the communication device data instance structure
uart_coding_ptr [out] – Where to store coding

Description

This function is used to get parameters of current line (baudrate,HW control...)

This function cannot be run in ISR

Note: DATA instance communication structure is passed here as parameter, not control interface.

Return Value

USB_OK - success.

Others (failure)

4.3.12 usb_class_cdc_set_acm_line_coding

Synopsis

```
usb_status usb_class_cdc_set_acm_line_coding
(
    cdc_class_call_struct_t *      ccs_ptr,
    usb_cdc_uart_coding_t *      uart_coding_ptr
)
```

Parameters

ccs_ptr [in] – the communication device data instance structure
uart_coding_ptr [in] – Coding to set

Description

This function is used to get parameters of current line (baudrate,HW control...)

This function cannot be run in ISR

NOTE!!!

DATA instance communication structure is passed here as parameter, not control interface.

Return Value

USB_OK - success.

Others (failure)

4.3.13 usb_class_cdc_get_acm_descriptors

Synopsis

```
usb_status usb_class_cdc_get_acm_descriptors
```

```
(
    usb_device_instance_handle    dev_handle,

    usb_interface_descriptor_handle intf_handle,
    usb_cdc_desc_acm_t * *        acm_desc,
    usb_cdc_desc_cm_t * *        cm_desc,
    usb_cdc_desc_header_t * *    header_desc,
    usb_cdc_desc_union_t * *     union_desc
)
```

Parameters

dev_handle	[in] – pointer to device instance
intf_handle	[in] – pointer to interface descriptor
acm_desc	[out] – pointer to acm descriptor
cm_desc	[out] – pointer to cm descriptor
header_desc	[out] – pointer to header descriptor
union_desc	[out] – pointer to union descriptor

Description

This function is hunting for descriptors in the device configuration and fills back fields if the descriptor was found. Must be run in locked state and validated USB device.

Return Value

USB_OK - success.

Others (failure)

4.3.14 usb_class_cdc_set_acm_descriptors

Synopsis

```
usb_status usb_class_cdc_set_acm_descriptors
(
    usb_device_instance_handle    dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_cdc_desc_acm_t * *        acm_desc,
    usb_cdc_desc_cm_t * *        cm_desc,
    usb_cdc_desc_header_t * *    header_desc,
    usb_cdc_desc_union_t * *     union_desc
)
```

Parameters

dev_handle	[in] – pointer to device instance
------------	-----------------------------------

intf_handle	[in] – pointer to interface descriptor
acm_desc	[in] – pointer to acm descriptor
cm_desc	[in] – pointer to cm descriptor
header_desc	[in] – pointer to header descriptor
union_desc	[in] – pointer to union descriptor

Description

This func This function is used to set descriptors for ACM interface Descriptors can be used afterwards by application or by driver .

Return Value

USB_OK - success.

Others (failure)

4.3.15 usb_class_cdc_get_ctrl_descriptor

Synopsis

```
usb_status usb_class_cdc_get_ctrl_descriptor
(
    usb_device_instance_handle dev_handle,

    usb_interface_descriptor_handle intf_handle,

    interface_descriptor_t* * if_desc_ptr
)
```

Parameters

dev_handle	[in] – pointer to device instance
intf_handle	[in] – pointer to interface
if_desc_ptr	[out] – pointer to interface descriptor

Description

This function is hunting for descriptor of control interface, which controls data interface identified by descriptor (intf_handle).The found control interface descriptor is written to if_desc_ptr.

Return Value

USB_OK - success.

Others (failure)

4.3.16 usb_class_cdc_bind_data_interfaces

Synopsis

```

usb_status usb_class_cdc_bind_data_interfaces
(
    usb_device_instance_handle    dev_handle,

    cdc_class_call_struct_t *    ccs_ptr
)

```

Parameters

dev_handle [in] – pointer to device instance
ccs_ptr [in] – the communication device control instance structure

Description

All data interfaces belonging to ACM control instance (specified by ccs_ptr) will be bound to this interface. Union functional descriptor describes which data interfaces should be bound.

Return Value

USB_OK - success.
Others (failure)

4.3.17 usb_class_cdc_unbind_data_interfaces

Synopsis

```

usb_status usb_class_cdc_unbind_data_interfaces
(
    cdc_class_call_struct_t *    ccs_ptr
)

```

Parameters

ccs_ptr [in] – the communication device control instance structure

Description

All data interfaces bound to ACM control instance will be unbound from this interface.

Return Value

USB_OK - success.
Others (failure)

4.3.18 usb_class_cdc_bind_acm_interface

Synopsis

```

usb_status usb_class_cdc_bind_acm_interface
(
    cdc_class_call_struct_t * ccs_ptr,

```

```

        interface_descriptor_t* if_des

        cdc_class_call_struct_t *          ccs_ptr
    )

```

Parameters

ccs_ptr [in] -- the communication device control instance structure

if_desc [in] -- pointer to control interface descriptor

Description

Must be run in locked state and validated USB device.

Return Value

USB_OK - success.

Others (failure)

4.3.19 usb_class_cdc_unbind_acm_interface

Synopsis

```

usb_status usb_class_cdc_unbind_acm_interfaces
(
    cdc_class_call_struct_t *          ccs_ptr
)

```

Parameters

ccs_ptr [in] -- the communication device control instance structure

Description

Data interface (bound by ccs_ptr) will be unbound from appropriate control interface.

Must be run in locked state and validated USB device.

Return Value

USB_OK - success.

Others (failure)

4.3.20 usb_class_cdc_init_ipipe

Synopsis

```

usb_status usb_class_cdc_init_ipipe
(
    cdc_class_call_struct_t *          acm_instance
)

```

Parameters

acm_instance [in] – ACM interface instance

Description

Starts interrupt endpoint to poll for interrupt on specified device.

Return Value

USB_OK - success.

Others (failure)

4.3.21 usb_class_cdc_intf_validate

Synopsis

```
uint32_t usb_class_cdc_intf_validate
(
    void * param
)
```

Parameters

param [in] – the pointer to interface

Description

This function is called to determine whether class interface is validated.

Return Value

1 – valid

0 – invalid

4.4 PHDC class driver APIs

4.4.1 usb_class_phdc_init

Synopsis

```
usb_status usb_class_phdc_init
(
    usb_device_instance_handle dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_class_handle* class_handle_ptr
)
```

Parameters

dev_handle [in] – device handle

intf_handle [in] – interface handle

class_handle_ptr [out] – the class driver's handle, refer to [6.5.1](#)

Description

This function is used to initialize the corresponding class driver, it is not called by the APP directly, normally, the class driver's init/deinit functions are included in the global interface map table. When corresponding interface is opened by `usb_host_open_dev_interface`, the init function will be called automatically and the class driver's handle will be returned.

Return Value

USB_OK- success

Others (failure)

4.4.2 usb_class_phdc_deinit

Synopsis

```
usb_status usb_class_phdc_deinit
(
    usb_class_handle          handle
)
```

Parameters

handle [in] – the class driver's handle

Description

This function is used to deinit a class driver handle,

This function is not called by the APP directly. It will be called when the USB host application call the `usb_host_close_dev_interface()` function.

Return Value

USB_OK- success

Others (failure)

4.4.3 usb_class_phdc_pre_deinit

Synopsis

```
usb_status usb_class_phdc_pre_deinit
(
    usb_class_handle          handle
)
```

Parameters

handle [in] – the class driver's handle

Description

This function is used to do some pre deinit operation like cancel all the uncompleted transfer. This function is not called by the APP directly, it will be included in a global class interface table so that it can be called automatically when the device detached.

Return Value

USB_OK- success

Others (failure)

4.4.4 usb_class_phdc_recv_data

Synopsis

```
usb_status usb_class_phdc_recv_data
(
usb_phdc_param_t*      call_param_ptr
)
```

Parameters

usb_phdc_param_t [in] – call param struct pointer, refer to [6.5.2](#)

Description

This function is called to receive data from either a bulk-in or an interrupt pipe.

4.4.5 usb_class_phdc_send_control_request

Synopsis

```
usb_status usb_class_phdc_send_control_request
(
usb_phdc_param_t*      call_param_ptr
)
```

Parameters

usb_phdc_param_t [in] – call param struct pointer

Description

This function is called by application to send a PHDC class specific request.

Return Value

USB_OK- success

Others (failure)

4.4.6 usb_class_phdc_send_data

Synopsis

```
usb_status usb_class_phdc_send_data
(
usb_phdc_param_t*      call_param_ptr
)
```

Parameters

usb_phdc_param_t [in] – call param struct pointer

Description

This function is called to send data to a PHDC device through a bulk-out pipe.

Return Value

USB_OK- success

Others (failure)

4.4.7 usb_class_phdc_set_callbacks

Synopsis

```
usb_status usb_class_phdc_set_callbacks
(
    usb_class_handle          handle,
    phdc_callback             sendCallback,
    phdc_callback             recvCallback,
    phdc_callback             ctrlCallback
)
```

Parameters

handle [in] – PHDC class handle
sendCallback [in] – send callback pointer
recvCallback [in] – receive callback pointer
ctrlCallback [in] – control callback pointer

Description

This function is called by application to register application callback pointers for the current PHDC interface.

Return Value

USB_OK- success

Others (failure)

4.5 Audio class driver APIs

4.5.1 usb_class_audio_control_init

Synopsis

```
usb_status usb_class_audio_control_init
(
    usb_device_instance_handle dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_class_handle *         class_handle_ptr
)
```

Parameters

dev_handle [in] – device handle

intf_handle [in] – interface handle
class_handle_ptr [out] – the class driver’s handle, refer to [6.6.1](#)

Description

This function is used to initialize the corresponding class driver, it is not called by the APP directly, normally, the class driver’s init/deinit functions are included in the global interface map table. When corresponding interface is opened by usb_host_open_dev_interface, the init function will be called automatically and the class driver’s handle will be returned.

Return Value

USB_OK- success
Others (failure)

4.5.2 usb_class_audio_control_deinit

Synopsis

```
usb_status usb_class_audio_control_deinit  
(  
usb_class_handle handle  
)
```

Parameters

handle [in] – the class driver’s handle

Description

This function is used to deinit a class driver handle,
This function is not called by the APP directly. It will be called when the USB host application call the usb_host_close_dev_interface() function.

Return Value

USB_OK- success
Others (failure)

4.5.3 usb_class_audio_control_pre_deinit

Synopsis

```
usb_status usb_class_audio_control_pre_deinit  
(  
usb_class_handle handle  
)
```

Parameters

handle [in] – the class driver’s handle

Description

This function is used to do some pre deinit operation like cancel all the uncompleted transfer. This function is not called by the APP directly, it will be included in a global class interface table so that it can be called automatically when the device detached.

Return Value

USB_OK- success

Others (failure)

4.5.4 usb_class_audio_stream_init

Synopsis

```
usb_status usb_class_audio_stream_init
(
    usb_device_instance_handle    dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_class_handle *           class_handle_ptr
)
```

Parameters

dev_handle [in] – device handle

intf_handle [in] – interface handle

class_handle_ptr [out] – the class driver's handle, refer to [6.6.2](#)

Description

This function is used to initialize the corresponding class driver, it is not called by the APP directly, normally, the class driver's init/deinit functions are included in the global interface map table. When corresponding interface is opened by usb_host_open_dev_interface, the init function will be called automatically and the class driver's handle will be returned.

Return Value

USB_OK- success

Others (failure)

4.5.5 usb_class_audio_stream_deinit

Synopsis

```
usb_status usb_class_audio_stream_deinit
(
    usb_class_handle handle
)
```

Parameters

handle [in] – the class driver's handle

Description

This function is used to deinit a class driver handle,

This function is not called by the APP directly. It will be called when the USB host application call the `usb_host_close_dev_interface()` function.

Return Value

USB_OK- success

Others (failure)

4.5.6 usb_class_audio_stream_pre_deinit

Synopsis

```
usb_status usb_class_audio_control_pre_deinit
(
    usb_class_handle          handle
)
```

Parameters

handle [in] – the class driver's handle

Description

This function is used to do some pre deinit operation like cancel all the uncompleted transfer. This function is not called by the APP directly, it will be included in a global class interface table so that it can be called automatically when the device detached.

Return Value

USB_OK- success

Others (failure)

4.5.7 usb_class_audio_control_get_descriptors

Synopsis

```
usb_status usb_class_audio_control_get_descriptors
(
    usb_device_instance_handle dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_audio_ctrl_desc_header_t* * header_desc,
    usb_audio_ctrl_desc_it_t* * it_desc,
    usb_audio_ctrl_desc_ot_t** ot_desc,
    usb_audio_ctrl_desc_fu_t* * fu_desc
)
```

Parameters

dev_handle [in] – pointer to device instance

intf_handle [in] – pointer to interface descriptor

header_desc [out] – pointer to header descriptor

it_desc [out] – pointer to input terminal descriptor

ot_desc [out] – pointer to output terminal descriptor
 fu_desc [out] – pointer to feature unit descriptor

Description

This function is hunting for descriptors in the device configuration and fills back fields if the audio control descriptor was found.

Return Value

USB_OK- success
 Others (failure)

4.5.8 usb_class_audio_stream_get_descriptors

Synopsis

```
usb_status usb_class_audio_stream_get_descriptors
(
    usb_device_instance_handle dev_handle,
    usb_interface_descriptor_handle intf_handle,
    usb_audio_stream_desc_specific_as_if_t* * as_itf_desc,
    usb_audio_stream_desc_format_type_t* * frm_type_desc,
    usb_audio_stream_desc_specific_iso_endp_t* * iso_endp_spec_desc
)
```

Parameters

dev_handle [in] – pointer to device instance
 intf_handle [in] – pointer to interface descriptor
 as_itf_desc [out] – pointer to specific audio stream interface descriptor
 frm_type_desc [out] – pointer to format type descriptor
 iso_endp_spec_desc [out] – pointer to specific isochronous endpoint descriptor

Description

This function is hunting for descriptors in the device configuration and fills back fields if the audio stream descriptor was found.

Return Value

USB_OK- success
 Others (failure)

4.5.9 usb_class_audio_control_set_descriptors

Synopsis

```
usb_status usb_class_audio_control_set_descriptors
(
```

```

usb_class_handle          handle
usb_audio_ctrl_desc_header_t*  header_desc,
usb_audio_ctrl_desc_it_t*      it_desc,
usb_audio_ctrl_desc_ot_t*      ot_desc,
usb_audio_ctrl_desc_fu_t*      fu_desc
)

```

Parameters

handle [in] – handle of the class

header_desc [in] – pointer to header descriptor

it_desc [in] – pointer to input terminal descriptor

ot_desc [in] – pointer to output terminal descriptor

fu_desc [in] – pointer to feature unit descriptor

Description

This function is used to set the audio control descriptors for control interface descriptors can be used afterwards by application or by driver.

Return Value

USB_OK- success

Others (failure)

4.5.10 usb_class_audio_stream_set_descriptors

Synopsis

```

usb_status usb_class_audio_stream_set_descriptors
(
    usb_class_handle          handle,
    usb_audio_stream_desc_specific_as_if_t* *  as_itf_desc,
    usb_audio_stream_desc_format_type_t* *     frm_type_desc,
    usb_audio_stream_desc_specific_iso_endp_t* * iso_endp_spec_desc
)

```

Parameters

handle [in] – handle of the class

as_itf_desc [in] – pointer to specific audio stream interface descriptor

frm_type_desc [in] – pointer to format type descriptor

iso_endp_spec_desc [in] – pointer to specific isochronous endpoint descriptor

Description

This function is used to set the audio stream descriptors for stream interface descriptors can be used afterwards by application or by driver.

Return Value

USB_OK- success

Others (failure)

4.5.11 usb_class_audio_cntrl_common

Synopsis

```
usb_status usb_class_audio_cntrl_common
(
    audio_command_t*      com_ptr,
    uint8_t               bmrequesttype,
    uint8_t               brequest,
    uint16_t              wvalue,
    uint16_t              windex,
    uint16_t              wlength,
    uint8_t *            data
)
```

Parameters

com_ptr	[in] – The communication device common command structure, refer to 6.6.3
bmrequesttype	[in] – pointer to format type descriptor
brequest	[in] – Bitmask of the request type
wvalue	[in] – Value to copy into wvalue field of the REQUEST
windex	[in] – Value to copy into windex field of the REQUEST
wlength	[in] – Length of the data associated with REQUEST
data	[in/out] – Pointer to data buffer used to send/recv

Description

This function is used to send a control request.

Return Value

USB_OK- success

Others (failure)

4.5.12 usb_class_audio_cntrl_callback

Synopsis

```
void usb_class_audio_cntrl_callback
(
    void*                 tr_ptr,
    void*                 param,
    uint8_t *            buffer,
)
```

```

uint32_t          len,
usb_status        status
)

```

Parameters

tr_ptr [in]	[in] - unused
param [in]	[in] - The pointer of class interface instance
buffer	[in] - Data buffer
len	[in] - Length of buffer
status	[out] - USB_OK- success Others (failure)

Description

This is the callback used when audio control information is sent or received.

Return Value

No return value.

4.5.13 usb_class_audio_recv_data

Synopsis

```

usb_status usb_class _audio_recv_data
(
audio_command_t* audio_ptr,
uint8_t *        buffer,
uint32_t         buf_size
)

```

Parameters

audio_ptr	[in] - audio control class interface pointer
buffer	[out] - Data buffer
buf_size	[in] - Length of buffer

Description

The function is used to receive data on isochronous IN pipe.

Return Value

USB_OK- success

Others (failure)

4.5.14 usb_class_audio_recv_callback

Synopsis

```

void usb_class_audio_recv_callback
(
void*          tr_ptr,
void*          param,
uint8_t *     buffer,
uint32_t      len,
usb_status    status
)

```

Parameters

tr_ptr [in]	[in] - unused
param [in]	[in] - The pointer of class interface instance
buffer	[out] - Data buffer
len	[out] - Length of buffer
status	[out] - USB_OK mean success Others (failure)

Description

This is the callback used when audio receive data on isochronous IN pipe.

Return Value

No return value.

4.5.15 usb_class_audio_send_data

Synopsis

```

usb_status usb_class_audio_send_data
(
audio_command_t* audio_ptr,
uint8_t *       buffer,
uint32_t        buf_size
)

```

Parameters

audio_ptr	[in] - audio control class interface pointer
buffer	[in] - Data buffer
buf_size	[in] - Length of buffer

Description

The function is used to send data on isochronous out pipe.

Return Value

USB_OK- success

Others (failure)

4.5.16 usb_class_audio_send_callback

Synopsis

```
void usb_class_audio_send_callback
(
    void*          tr_ptr,
    void*          param,
    uint8_t *      buffer,
    uint32_t       len,
    usb_status     status
)
```

Parameters

tr_ptr [in]	[in] – unused
param [in]	[in] - The pointer of class interface instance
buffer	[in] – Data buffer
len	[in] – Length of buffer
status	[out] – USB_OK mean success Others (failure)

Description

This is the callback used when audio send data on isochronous out pipe.

Return Value

No return value.

4.5.17 usb_class_audio_get_alternative_interface_descriptors_and_sync

Synopsis

```
usb_status usb_class_audio_get_alternative_interface_descriptors_and_sync
(
    usb_device_instance_handle dev_handle,
    usb_device_interface_struct_t* default_intf_handle,
    usb_device_interface_struct_t* intf_handle,
    void* alternative_interface_descriptor
)
```

Parameters

dev_handle	[in] – pointer to device instance
default_intf_handle	[in] – pointer to original interface descriptor
intf_handle	[in] – pointer to interface descriptor
alternative_interface_descriptor	[in] – The alternate interface descriptor

Description

The function is used to get the endpoint descriptor of alternate interface.

Return Value

USB_OK- success

Others (failure)

Chapter 5 USB Host Configuration

5.1 Common configure

5.1.1 USBCFG_HOST_KHCI

If macro is no-zero, enable KHCI controller driver (full speed), otherwise disable.

5.1.2 USBCFG_HOST_EHCI

If macro is no-zero, enable EHCI controller driver (high speed), otherwise disable.

5.1.3 USBCFG_HOST_NUM

The MACRO indicates how many hosts can be active at the same time.

5.1.4 USBCFG_HOST_MAX_PIPES

How many pipes HOST stack supports?

Such as:

```
#define USBCFG_HOST_MAX_PIPES          (16)
```

It indicates host supports max pipes are 16.

5.1.5 USBCFG_HOST_DEFAULT_MAX_NAK_COUNT

MAX retries times, when receive a NAK.

Such as:

```
#define USBCFG_HOST_DEFAULT_MAX_NAK_COUNT    (3000)
```

It indicates the largest continuous NAK retry times are 3000.

5.1.6 USBCFG_HOST_CTRL_FAILED_RETRY

Control pipe retries times, when host get an error.

Such as:

```
#define USBCFG_HOST_CTRL_FAILED_RETRY      (3)
```

It indicates the max continuous error retry times are 3.

5.1.7 USBCFG_HOST_CTRL_STALL_RETRY

Control pipe retries times, when host get an error.

Such as:

#define USBCFG_HOST_CTRL_STALL_RETRY (1)

It indicates the max continuous error retry times are 1.

5.1.8 USBCFG_HOST_MAX_POWER

MAX power host can support. The unit is 2mA.

Such as:

#define USBCFG_HOST_MAX_POWER (250)

It indicates the max power is 500mA for every device.

5.1.9 USBCFG_HOST_MAX_CONFIGURATION_PER_DEV

How many configure descriptor device has, host supports?

Such as:

#define USBCFG_HOST_MAX_CONFIGURATION_PER_DEV (2)

It indicates the max configure descriptor number is 2 for every device.

5.1.10 USBCFG_HOST_MAX_INTERFACE_PER_CONFIGURATION

How many interface for each configure descriptor, host supports?

Such as:

#define USBCFG_HOST_MAX_INTERFACE_PER_CONFIGURATION (4)

It indicates the max interface number of each configure descriptor is 4.

5.1.11 USBCFG_HOST_MAX_EP_PER_INTERFACE

How many ep for each interface descriptor, host supports?

Such as:

#define USBCFG_HOST_MAX_EP_PER_INTERFACE (4)

It indicates the max ep number of each interface descriptor is 4.

5.1.12 USBCFG_HOST_HID

1 indicates the HID class driver is enabled

0 indicates the HID class driver is disabled

5.1.13 USBCFG_HOST_MSD

1 indicates the MSD class driver is enabled

0 indicates the MSD class driver is disabled

5.1.14 USBCFG_HOST_CDC

1 indicates the CDC class driver is enabled

0 indicates the CDC class driver is disabled

5.1.15 USBCFG_HOST_PHDC

1 indicates the PHDC class driver is enabled

0 indicates the PHDC class driver is disabled

5.1.16 USBCFG_HOST_AUDIO

1 indicates the AUDIO class driver is enabled

0 indicates the AUDIO class driver is disabled

5.1.17 USBCFG_HOST_HUB

1 indicates the HUB class driver is enabled

0 indicates the HUB class driver is disabled

5.1.18 USBCFG_HOST_PRINTER

1 indicates the PRINTER class driver is enabled

0 indicates the PRINTER class driver is disabled

5.1.19 USBCFG_HOST_VIDEO

1 indicates the Video class driver is enabled

0 indicates the Video class driver is disabled

5.1.20 USBCFG_HOST_BUFF_PROPERTY_CACHEABLE

1 cacheable, buffer cache maintenance is needed

0 uncacheable, buffer cache maintenance is not needed

5.2 KHCI configure

5.2.1 USBCFG_HOST_KHCI_TASK_PRIORITY

The priority of khci task.

5.2.2 USBCFG_HOST_KHCI_TR_QUE_MSG_CNT

The max msg count in message queue.

5.2.3 USBCFG_HOST_KHCI_MAX_INT_TR

The max TR count for khci controller driver.

5.2.4 USBCFG_KHCI_4BYTE_ALIGN_FIX

The Full Speed controller requires all the buffers used for the transfer need to be 4 bytes aligned (both the start address and the length). If the application can guarantee it, then the MACRO USBCFG_KHCI_4BYTE_ALIGN_FIX can be set to 0. Otherwise, it needs to set to 1, then the USB HostStack will use a internal 4 bytes aligned buffer to replace the buffer provided by the user so that the above requirement can be meet.

And the internal buffer size is assigned by the MACRO USBCFG_HOST_KHCI_SWAP_BUF_MAX.

5.2.5 USBCFG_HOST_PORT_NATIVE

This micro is only valid when using micro usb port of TWR board.

If using micro usb port of TWR board, the micro should be set to (1).

If using SER board usb port, it should be set to (0).

5.3 EHCI configure

5.3.1 USBCFG_EHCI_USE_SW_TOGGLING

1 indicates host uses software toggle.

0 indicates host not uses software toggle.

5.3.2 USBCFG_EHCI_MAX_QH_DESCRS

How many QH HOST stacks are supported at the maximum?

5.3.3 USBCFG_EHCI_MAX_QTD_DESCRS

How many QTD HOST stacks are supported at the maximum?

5.3.4 USBCFG_EHCI_MAX_ITD_DESCRS

How many ITD HOST stacks are supported at the maximum?

5.3.5 USBCFG_EHCI_MAX_SITD_DESCRS

How many SITD HOST stacks are supported at the maximum?

5.3.6 USBCFG_EHCI_PIPE_TIMEOUT

Maximum pipe timeout number.

5.3.7 USBCFG_EHCI_FRAME_LIST_SIZE

EHCI periodic list frame size.

5.3.8 USBCFG_EHCI_ITD_THRESHOLD

The MARCO is used for ISO type transfer. The value is the sum of pipe transfer queue length and 2.

5.3.9 USBCFG_EHCI_HS_DISCONNECT_ENABLE

1 indicates the connect function is enabled.

0 indicates the connect function is disabled.

Chapter 6 Data Structures

6.1 USB host controller driver structures

6.1.1 usb_setup_t

All USB devices respond to requests from the host on the device's Default Control Pipe. These requests are made using control transfers. The request and the request's parameters are sent to the device in the Setup packet. The host is responsible for establishing the values passed in the fields listed in the struct.

Synopsis

```
typedef struct
{
    uint8_t          bmrequesttype;
    uint8_t          brequest;
    uint8_t          wvalue[2];
    uint8_t          windex[2];
    uint8_t          wlength[2];
} usb_setup_t;
```

Fields

- bmrequesttype - Characteristics of request.
- brequest - Specific request.
- wvalue - Word-sized field that varies according to request
- windex - Word-sized field that varies according to request; typically used to pass an index or offset.
- wlength - Number of bytes to transfer if there is a Data stage.

6.1.2 tr_struct_t

TR struct represents a transfer. A TR will be allocated, filled and send to HCI when apps, class drivers or controller start a transfer. And HCI decomposes the TR into transactions and then does the actual transmission.

Synopsis

```
typedef struct tr_struct
{
    struct tr_struct*  next;
    uint32_t           status;
    uint32_t           tr_index;
    uint8_t *          tx_buffer;
    uint8_t *          rx_buffer;
    uint32_t           tx_length;
    uint32_t           rx_length;
}
```

```

bool                send_phase;
usb_setup_t        setup_packet;
uint32_t           transfered_length;
tr_callback        callback;
void*              callback_param;
void*              hw_transaction_head; /* used only for EHCI */
void*              hw_transaction_tail; /* used only for EHCI */
uint8_t            occupied;
uint8_t            setup_status;
uint8_t            no_of_itds_sitds;
uint8_t            setup_first_phase;
} tr_struct_t;

```

Fields

next	- A pointer to save next TR address
status	- Save TR status.
tr_index	- Transfer number on current usb_host_ptr.
tx_buffer	- To be sent data buffer address.
rx_buffer	- To be received data buffer address.
tx_length	- Send data length. For control transfers, the length of data for the data phase.
rx_length	- Recv data length. For control transfers, the length of data for the data phase.
send_phase	- TR dir. For control transfers: Send/Receive.
setup_packet	- Setup packet raw data.
transfered_length	- The data length has been transferred.
callback	- The callback function to be invoked when a transfer is completed or an error is to be reported.
callback_param	- The second parameter to be passed into the callback function when it is invoked.
hw_transaction_head	- HW struct head pointer, used only for EHCI.
hw_transaction_tail	- HW struct tail pointer, used only for EHCI.
occupied	- Is used or not.
setup_status	- Setup transfer status.
no_of_itds_sitds	- The numbers of itds or sitds for the TR.
setup_first_phase	- Is the setup packet is sent.

6.1.3 pipe_init_struct_t

Pipe init struct is used to set pipe params when calling usb_host_open_pipe().

Synopsis

```
typedef struct pipe_init_struct
{
    void*                dev_instance;
    uint32_t             flags;
    uint16_t             max_packet_size;
    uint16_t             nak_count;
    uint8_t              interval;
    uint8_t              endpoint_number;
    uint8_t              direction;
    uint8_t              pipetype;
    uint8_t              trs_per_uframe;
} pipe_init_struct_t;
```

Fields

dev_instance	- The device instance of this pipe.
flags	- Pipe flags.
max_packet_size	- Max pipe's packet size.
nak_count	- Max NAK retry count. MUST be zero for interrupt.
interval	- Interval for polling pipe for data transfer.
endpoint_number	- The device's ep number of this pipe.
direction	- The pipe direction. #define USB_RECV (0) #define USB_SEND (1)
pipetype	- The transfer type of this pipe. #define USB_CONTROL_PIPE (0x00) #define USB_ISOCHRONOUS_PIPE (0x01) #define USB_BULK_PIPE (0x02) #define USB_INTERRUPT_PIPE (0x03)
trs_per_uframe	- The transaction opportunities per microframe.

6.1.4 pipe_struct_t

The struct is used to establish interface between host and device. Used by `usb_host_open_pipe()`.

Synopsis

```
typedef struct pipe_struct
{
    struct pipe_struct *next;
    tr_struct_t*       tr_list_ptr;
```

```

void*                dev_instance;
uint32_t             flags;
uint16_t             max_packet_size;
uint16_t             nak_count;
uint8_t              interval;
uint8_t              endpoint_number;
uint8_t              direction;
uint8_t              pipetype;
uint8_t              trs_per_uframe;
uint8_t              open;
uint8_t              nextdata01;
} pipe_struct_t;

```

Fields

- next** - A pointer to save next pipe struct address
- tr_list_ptr** - List of TRs linked to this pipe.
- dev_instance** - The device instance of this pipe.
- flags** - After all data transferred, should we terminate the transfer with a zero length packet if the last packet size == max_packet_size?
- max_packet_size** - Max pipe's packet size.
- nak_count** - Max NAK retry count. MUST be zero for interrupt.
- interval** - Interval for polling pipe for data transfer.
- endpoint_number** - The device's ep number of this pipe.
- direction** - The pipe direction.
- ```

#define USB_RECV (0)
#define USB_SEND (1)

```
- pipetype** - The transfer type of this pipe.
- ```

#define USB_CONTROL_PIPE        (0x00)
#define USB_ISOCHRONOUS_PIPE    (0x01)
#define USB_BULK_PIPE           (0x02)
#define USB_INTERRUPT_PIPE      (0x03)

```
- trs_per_uframe** - Number of transaction per frame, only high-speed high-bandwidth pipes.
- open** - Is opened or not.
- nextdata01** - Endpoint data toggling bit.

6.1.5 usb_host_driver_info_t

Information for one class or device driver, Used by `usb_host_register_driver_info()`.

Synopsis

```
typedef struct driver_info
{
    uint8_t          idVendor[2];
    uint8_t          idProduct[2];
    uint8_t          bDeviceClass;
    uint8_t          bDeviceSubClass;
    uint8_t          bDeviceProtocol;
    uint8_t          reserved;
    event_callback   attach_call;
} usb_host_driver_info_t;
```

Fields

<code>idVendor[2]</code>	- Vendor ID per USB-IF.
<code>idProduct[2]</code>	- Product ID per manufacturer.
<code>bDeviceClass</code>	- Class code, 0xFF if any.
<code>bDeviceSubClass</code>	- Sub-Class code, 0xFF if any.
<code>bDeviceProtocol</code>	- Protocol, 0xFF if any.
<code>reserved</code>	- Alignment padding .
<code>attach_call</code>	- The function to call when above information matches the one in device's descriptors.

6.1.6 dev_instance_t

The struct stands by a device. When a device attached, a struct will be created. And when a device detached, the struct will be removed. Used by `usb_host_dev_mng_attach()`.

Synopsis

```
typedef struct dev_instance
{
    struct dev_instance *next;
    usb_host_handle     host;
    hub_device_struct_t* hub_instance;
    uint8_t             speed;
    uint8_t             hub_no;
    uint8_t             port_no;
    uint8_t             address;
    uint16_t            cfg_value;
```

```

uint8_t          ctrl_retries;
uint8_t          stall_retries;
uint8_t          new_config;
uint8_t          num_of_interfaces;
uint8_t          rerserved1[1];
uint16_t         state;
usb_pipe_handle  control_pipe;
tr_callback      control_callback;
void*            control_callback_param;
device_descriptor_t dev_descriptor;
uint8_t          rerserved2[2];
uint8_t          buffer[9];
uint8_t          rerserved3[3];
void*            lpConfiguration;
usb_device_configuration_struct_t configuration;
usb_device_interface_info_struct_t
interface_info[USBCFG_HOST_MAX_INTERFACE_PER_CONFIGURATION];
uint8_t          attached;
uint8_t          pre_detached;
uint8_t          to_be_detached;
uint8_t          target_address;
uint8_t          level;
} dev_instance_t;

```

Fields

next	- A pointer to save next struct address
host	- The host of the device attached.
hub_instance	- HUB instance, this device linked.
speed	- Device speed. 0 – full-speed transfer 1 – low-speed transfer 2 – high-speed transfer
hub_no	- The HUB number, root hub is 0.
port_no	- The HUB's port(1~8), this device linked.
address	- Device address(1~127).
cfg_value	- Configure value.
ctrl_retries	- Retry count of control when transfer failed.
stall_retries	- Retry count of control when ep stalled.
new_config	- non-zero = new config.

num_of_interfaces	- The interface numbers of device.
reserved1[1]	- Reserved.
state	- Device state.
control_pipe	- Control pipe handle.
control_callback	- The callback function to be invoked when a control transfer is completed or an error is to be reported.
control_callback_param	- The second parameter to be passed into the control_callback function when it is invoked.
dev_descriptor	- Device descriptor.
reserved2[2]	- Reserved.
buffer[9]	- enumeration buffer.
reserved3[3]	- Reserved.
lpConfiguration	- Configure descriptor pointer.
configuration	- Save the device configuration
interface_info	- Save information of the matched interface.
attached	- Device attached or not.
pre_detached	- Device pre-detached or not.
to_be_detached	- Device need to be detached or not.
target_address	- Temp address, assign for device.
level	- Device level.

6.1.7 usb_host_state_struct_t

This struct is used to keep usb host status.

Synopsis

```
typedef struct usb_host_generic_structure
{
    uint8_t                occupied;
    uint8_t                controller_id;
    usb_host_handle        controller_handle;
    const usb_host_api_functions_struct_t * host_controller_api;
    event_callback         unsupport_device_callback;
    void*                  device_list_ptr;
    struct driver_info *   device_info_table;
    os_mutex_handle        mutex;
}
```

```

    os_sem_handle          hub_sem;
    os_mutex_handle       hub_mutex;
    void*                 hub_link;
    uint32_t              hub_task;
    tr_struct_t           tr_list[MAX_TR_NUMBER];
    uint32_t              tr_index;
    void*                 root_hub_ptr;
    usb_host_service_struct_t services[MAX_HOST_SERVICE_NUMBER];
    uint8_t               tr_user;
#ifdef USBCFG_OTG
    usb_otg_handle        otg_handle;
#endif
} usb_host_state_struct_t;

```

Fields

occupied	- Is used or not.
controller_id	- HW controller ID.
controller_handle	- HW controller handle.
host_controller_api	- HW controller API list.
unsupport_device_callback	- The callback function to be invoked when unsupported device attached.
device_list_ptr	- Device instance list connected to this host.
device_info_table	- Supported device info table.
mutex	- Mutex for host.
hub_sem	- Semaphore for HUB class driver.
hub_mutex	- Mutex for HUB class driver.
hub_link	- HUB instance list attached to this host
hub_task	- HUB task handle.
tr_list	- TRs for this host.
tr_index	- TR count is used.
root_hub_ptr	- Root HUB instance handle.
services	- services for pipe or specific event.
tr_user	- TR count in using.
otg_handle	- OTG handle.

6.2 HID class structures

6.2.1 usb_hid_class_struct_t

HID class struct.

Synopsis

```
typedef struct _usb_hid_class
{
    usb_host_handle                host_handle;
    usb_device_instance_handle     dev_handle;
    usb_interface_descriptor_handle intf_handle;
    bool                            in_setup;
    usb_pipe_handle                in_pipe;
    /* Here we store callback and parameter from higher level */
    tr_callback                    ctrl_callback;
    void*                          ctrl_param;
    tr_callback                    recv_callback;
    void*                          recv_param;
    uint32_t                       running;
} usb_hid_class_struct_t;
```

Fields

host_handle	- Pointer to USB host.
dev_handle	- Pointer to device.
intf_handle	- Pointer to interface.
in_setup	- Class driver in setup phase or not.
in_pipe	- Pointer to in pipe.
ctrl_callback	- The function to call when control transfer callback.
ctrl_param	- The second parameter to be passed into the callback function when it is invoked.
recv_callback	- The function to call when data recved.
recv_param	- The second parameter to be passed into the callback function when it is invoked.
running	- It is running.

6.2.2 hid_command_t

The HID command structure.

Synopsis

```

typedef struct _hid_command
{
    usb_class_handle      class_ptr;
    tr_callback           callback_fn;
    void*                 callback_param;
} hid_command_t;

```

Fields

class_ptr - Pointer to class call structure.
callback_fn - Callback function.
callback_param - Callback function parameter.

6.3 MSD class structures

6.3.1 usb_mass_class_struct_t

MSD class struct.

Synopsis

```

typedef struct
{
    usb_host_handle          host_handle;
    usb_device_instance_handle dev_handle;
    usb_interface_descriptor_handle intf_handle;
    usb_pipe_handle         control_pipe;
    usb_pipe_handle         bulk_in_pipe;
    usb_pipe_handle         bulk_out_pipe;
    mass_queue_struct_t     queue;
    uint8_t                 interface_num;
    uint8_t                 alternate_setting;
    tr_callback             ctrl_callback;
    void *                  ctrl_param;
    os_mutex_handle         mutex;
} usb_mass_class_struct_t;

```

Fields

host_handle - Pointer to USB host.
dev_handle - Pointer to device.
intf_handle - Pointer to interface.
control_pipe - Control pipe handle.
bulk_in_pipe - Bulk in pipe handle.

bulk_out_pipe	- Bulk out pipe handle.
queue	- The queue used to save cmd.
interface_num	- Interface number.
alternate_setting	- Interface alternate setting
ctrl_callback	- The function to call when control transfer callback.
ctrl_param invoked.	- The second parameter to be passed into the callback function when it is invoked.
mutex	- Mutex for msd class driver.

6.3.2 mass_command_struct_t

The MSD command structure.

Synopsis

```
typedef struct
{
    usb_class_handle                CLASS_PTR;
    uint32_t                        LUN;
    cbw_struct_t *                  CBW_PTR;
    csw_struct_t *                  CSW_PTR;
    void (_CODE_PTR_)              (CALLBACK)
        (usb_status,
         void*,
         void*,
         uint32_t
        );

    void*                            DATA_BUFFER;
    uint32_t                          BUFFER_LEN;
    uint32_t                          BUFFER_SOFAR;
    usb_class_mass_command_status     STATUS;
    usb_class_mass_command_status     PREV_STATUS;
    uint32_t                          TR_BUF_LEN;
    uint8_t                           RETRY_COUNT;
    uint8_t                           CBW_RETRY_COUNT;
    uint8_t                           DPHASE_RETRY_COUNT;
    uint8_t                           CSW_RETRY_COUNT;
    uint8_t                           IS_STALL_IN_DPHASE;
    uint8_t                           TR_INDEX;
} mass_command_struct_t;
```

Fields

class_ptr - Pointer to class handle.

LUN	- Logical unit number on device.
callback_param	- Callback function parameter.
CBW_PTR	- Current CBW being constructed
CSW_PTR	- CSW for this command
CALLBACK	- Callback function
DATA_BUFFER	- Buffer for IN/OUT for the command
BUFFER_LEN	- Length of data buffer
BUFFER_SOFAR	- Number of bytes trans so far
STATUS	- Current status of this command
PREV_STATUS	- Previous status of this command
TR_BUF_LEN	- Length of the buffer received in currently executed TR
RETRY_COUNT	- Number of times this commad tried
CBW_RETRY_COUNT	- Number of times this commad tried
DPHASE_RETRY_COUNT	- Number of times this commad tried
CSW_RETRY_COUNT	- Number of times this commad tried
IS_STALL_IN_DPHASE	- Is stall happened in data dpase
TR_INDEX	- TR_INDEX of the TR used for search

6.4 CDC class structures

6.4.1 usb_acm_class_intf_struct_t

CDC Control interface struct.

Synopsis

```
typedef struct {
    usb_cdc_desc_acm_t *          acm_desc;
    usb_cdc_desc_cm_t *          cm_desc;
    usb_cdc_desc_header_t *      header_desc;
    usb_cdc_desc_union_t *       union_desc;
    usb_cdc_uart_coding_t        uart_coding;
    usb_pipe_handle               interrupt_pipe;
    usb_cdc_acm_state_t           interrupt_buffer;
    usb_cdc_ctrl_state_t         ctrl_state;
    os_event_handle               acm_event;
    usb_host_handle               host_handle;
    usb_device_instance_handle    dev_handle;
    usb_interface_descriptor_handle intf_handle;
}
```

```

uint8_t          intf_num;
os_mutex_handle mutex;
} usb_acm_class_intf_struct_t;

```

Fields

acm_desc	- ACM descriptor handle.
cm_desc	- CM descriptor handle.
header_desc	- Header descriptor handle.
union_desc	- Union descriptor handle.
uart_coding	- Current uart coding config.
interrupt_pipe	- Interrupt pipe handle.
interrupt_buffer	- Interrupt transfer buffer.
ctrl_state	- Control pipe state.
acm_event	- ACM event.
host_handle	- Pointer to USB host.
dev_handle	- Pointer to device.
intf_handle	- Pointer to interface.
intf_num	- Interface number.
mutex	- Mutex for ACM interface.

6.4.2 usb_data_class_intf_struct_t

CDC Data interface struct.

Synopsis

```

typedef struct {
    cdc_class_call_struct_t *          BOUND_CONTROL_INTERFACE;
    uint8_t *                          rx_buffer;
    uint8_t *                          RX_BUFFER_DRV;
    uint8_t *                          RX_BUFFER_APP;
    uint32_t                            RX_BUFFER_SIZE;
    uint32_t                            RX_READ;
    uint32_t                            TX_SENT;
    usb_pipe_handle                    in_pipe;
    usb_pipe_handle                    out_pipe;
    char *                              device_name;
    os_event_handle                    data_event;
    usb_host_handle                    host_handle;
}

```

```

usb_device_instance_handle      dev_handle;
usb_interface_descriptor_handle  intf_handle;
uint8_t                         intf_num;
os_mutex_handle                 mutex;
tr_callback                      ctrl_callback;
void *                           ctrl_callback_param;
_usb_cdc_callback                data_tx_cb;
_usb_cdc_callback                data_rx_cb;
bool                             is_rx_xferring;
bool                             is_tx_xferring;
} usb_data_class_intf_struct_t;

```

Fields

BOUND_CONTROL_INTERFACE	- Interface handle bound to data interface.
rx_buffer	- Recv buffer.
RX_BUFFER_DRV	- The buffer address, class received.
RX_BUFFER_APP	- The buffer address, app has read last.
RX_BUFFER_SIZE	- rx_buffer size.
RX_READ	- Recv data length.
TX_SENT	- Sent data length.
in_pipe	- In pipe handle.
out_pipe	- Out pipe handle.
device_name	- Device name.
data_event	- Event for data interface.
host_handle	- Pointer to USB host.
dev_handle	- Pointer to device.
intf_handle	- Pointer to interface.
intf_num	- Interface number.
mutex	- Mutex for data interface.
ctrl_callback	- The function to call when control transfer callback.
ctrl_callback_param	- The second parameter to be passed into the callback function when it is invoked.
data_tx_cb	- Data send callback.
data_rx_cb	- Data recv callback.
is_rx_xferring	- Is in recv data phase?

is_rx_xferring

- Is in send data phase?

6.4.3 cdc_command_t

The CDC command structure.

Synopsis

```
typedef struct {
    cdc_class_call_struct_t *   CLASS_PTR;
    tr_callback                  CALLBACK_FN;
    void *                       CALLBACK_PARAM;
} cdc_command_t;
```

Fields

CLASS_PTR - Pointer to class call structure.
CALLBACK_FN - Callback function.
CALLBACK_PARAM - Callback function parameter.

6.5 PHDC class structures

6.5.1 usb_phdc_class_struct_t

PHDC class struct.

Synopsis

```
typedef struct _usb_phdc_class_intf_struct_type
{
    usb_host_handle             host_handle;
    usb_device_instance_handle dev_handle;
    usb_interface_descriptor_handle intf_handle;
    /* Pipes */
    usb_pipe_handle            control_pipe;
    usb_pipe_handle            bulk_in_pipe;
    usb_pipe_handle            bulk_out_pipe;
    usb_pipe_handle            int_in_pipe;
    usb_phdc_desc_qos_metadata_list_t *qos_metadata_list;
    usb_phdc_desc_fcn_ext_t    *fcn_ext_desc;
    /* Callbacks */
    phdc_callback              send_callback;
    phdc_callback              recv_callback;
    phdc_callback              ctrl_callback;
    bool                       preamble_capability;
    uint8_t                    phdc_data_code;
    bool                       set_clear_request_pending;
}
```

```

    bool                device_feature_set;
    uint8_t             num_transf_bulk_in;
    uint8_t             num_transf_bulk_out;
    os_mutex_handle     mutex;
    uint32_t            running;
} usb_phdc_class_struct_t;

```

Fields

host_handle - Pointer to USB host.
dev_handle - Pointer to device.
intf_handle - Pointer to interface.
control_pipe - Control pipe handle.
bulk_in_pipe - Bulk in pipe handle.
bulk_out_pipe - Bulk out pipe handle.
int_in_pipe - Interrupt in pipe handle.
qos_metadata_list - QoS and Metadata Linked-List
fcn_ext_desc - Function extension descriptor
send_callback - Send data callback
recv_callback - Recv data callback
ctrl_callback - Control transfer callback
preamble_capability - Preamble capability
phdc_data_code - PHDC data code
set_clear_request_pending - Pending transfers flags
device_feature_set - Metadata feature set for the device.
num_transf_bulk_in - Number of in transfers.
num_transf_bulk_out - Number of out transfers.
mutex - Mutex for msd class driver.
running - It is running.

6.5.2 usb_phdc_param_t

The PHDC param structure.

Synopsis

```

typedef struct usb_phdc_param_type
{

```

```

/* [APP->PHDC] phdc call struct pointer */
usb_class_handle class_ptr;
tr_callback callback_fn;
void* callback_param;
/* [PHDC->APP] USB status code. usb_status (standard) code when the transfer is
finished. Not valid until the callback is called */
usb_status status;
/* [APP->PHDC] length of buffer (only for PHDC Send/Recv requests) */
uint32_t buff_size;
/* [PHDC->APP] USB transaction index. Used to identify the Send/Recv transaction */
uint32_t tr_index;
/* [PHDC->APP] USB transaction index. Used to identify the Send/Recv transaction */
usb_pipe_handle tr_pipe_handle;
/* [APP->PHDC] Boolean for metadata transfers (only for PHDC Send request) */
bool metadata;
/* [APP->PHDC] the type of the request (only for PHDC Ctrl requests) */
uint8_t classRequestType;
/* [APP->PHDC] QoS for receive transfers (only for PHDC Recv request) */
uint8_t qos;
/* [PHDC->APP] USB PHDC status code. USB PHDC (specific) code when the transfer is
finished. Not valid until the callback is called */
uint8_t usb_phdc_status;
/* [APP->PHDC] data buffer (only for PHDC Send/Recv requests) */
uint8_t* buff_ptr;
} usb_phdc_param_t;

```

Fields

class_ptr	- Pointer to class handle.
callback_fn	- Callback function
callback_param	- Callback function parameter.
classRequestType	- the type of the request (only for PHDC Ctrl requests).
metadata	- Boolean for metadata transfers
qos	- QoS for receive transfers (only for PHDC Recv request).
usb_phdc_status	- USB PHDC status code.
usb_status	- USB status code.
buff_ptr	- data buffer (only for PHDC Send/Recv requests).
buff_size	- length of buffer (only for PHDC Send/Recv requests).
tr_index	- USB transaction index. Used to identify the Send/Recv transaction.
tr_pipe_handle	- TR pipe handle.

6.6 AUDIO class structures

6.6.1 audio_control_struct_t

Audio control subclass structure.

Synopsis

```
typedef struct {
    usb_host_handle             host_handle;
    usb_device_instance_handle dev_handle;
    usb_interface_descriptor_handle intf_handle;
    usb_audio_ctrl_desc_header_t* header_desc;
    usb_audio_ctrl_desc_it_t*   it_desc;
    usb_audio_ctrl_desc_ot_t*   ot_desc;
    usb_audio_ctrl_desc_fu_t*   fu_desc;
    uint32_t                    in_setup;
    tr_callback                  ctrl_callback;
    void*                        ctrl_param;
    usb_pipe_handle              interrupt_pipe;
    usb_audio_control_status_t   interrupt_buffer;
    tr_callback                  interrupt_callback;
    void*                        interrupt_callback_param;
    tr_callback                  user_callback;
    void*                        user_param;
    uint8_t                      ifnum;
} audio_control_struct_t;
```

Fields

ctrl_state	- Control pipe state.
acm_event	- ACM event.
host_handle	- Pointer to USB host.
dev_handle	- Pointer to device.
intf_handle	- Pointer to interface.
header_desc	- Header descriptor handle.
it_desc	- IT descriptor handle.
ot_desc	- OT descriptor handle.
fu_desc	- FU descriptor handle.
in_setup	- Is in setup phase.
ctrl_callback	- The function to call when control transfer callback.

ctrl_param when it is invoked.	- The second parameter to be passed into the callback function
interrupt_pipe	- Interrupt pipe handle.
interrupt_buffer	- Interrupt transfer buffer.
interrupt_callback	- The function to call when interrupt transfer callback.
interrupt_callback_param function when it is invoked.	- The second parameter to be passed into the callback
user_callback	- App callback function.
user_param	- App callback param.
ifnum	- Interface number.

6.6.2 audio_stream_struct_t

AUDIO stream interface struct.

Synopsis

```
typedef struct {
    usb_host_handle          host_handle;
    usb_device_instance_handle dev_handle;
    usb_interface_descriptor_handle intf_handle;
    usb_audio_stream_desc_specific_as_if_t* as_itf_desc;
    usb_audio_stream_desc_format_type_t* frm_type_desc;
    usb_audio_stream_desc_specific_iso_endp_t* iso_endp_spec_desc;
    usb_pipe_handle         iso_in_pipe;
    usb_pipe_handle         iso_out_pipe;
    tr_callback             rcv_callback;
    void*                   rcv_param;
    tr_callback             send_callback;
    void*                   send_param;
    os_event_handle         stream_event;
    uint8_t                 iso_ep_num;
} audio_stream_struct_t;
```

Fields

host_handle	- Pointer to USB host.
dev_handle	- Pointer to device.
intf_handle	- Pointer to interface.
as_itf_desc	- AS interface descriptor.
frm_type_desc	- Format type descriptor.

iso_endp_spec_desc	- ISO ep descriptor.
iso_in_pipe	- ISO pipe in handle.
iso_out_pipe	- ISO pipe out handle.
recv_callback	- Recv stream callback
recv_param	- Recv stream callback param
send_callback	- Send stream callback
send_param	- Send stream callback param
stream_event	- Event for stream interface.
iso_ep_num	- ISO ep number.

6.6.3 audio_command_t

The AUDIO command structure.

Synopsis

```
typedef struct {
    usb_class_handle          class_control_handle;
    usb_class_handle          class_stream_handle;
    tr_callback               callback_fn;
    void*                     callback_param;
} audio_command_t;
```

Fields

class_control_handle	- Pointer to class control interface structure.
class_stream_handle	- Pointer to class stream interface structure
callback_fn	- Callback function.
callback_param	- Callback function parameter.

Chapter 7 OS Adapter

OS adapter is used to provide unified OS API to USB Stack.

7.1 OS adapter overview

OS adapter provides many function modules, including Event, MsgQ, Mutex, and Sem.

7.2 API overview

7.2.1 Task management

Task management includes create, delete, suspend, resume.

Table 8 Task management APIs

No.	API function	Description
1	OS_Task_create()	Create a task, and return value is task id.
2	OS_Task_delete()	Delete a task.
3	OS_Task_suspend()	Suspend a task.
4	OS_Task_resume()	Resume a task.

7.2.2 Event

Event model includes create, destroy, set, wait, check and clear.

Table 9 Event APIs

No.	API function	Description
1	OS_Event_create()	Create a Event, and return value is event handle.
2	OS_Event_destroy()	Destroy a event.
3	OS_Event_set()	Set Event.
4	OS_Event_check_bit()	Check Event
5	OS_Event_clear()	Clear Event.
6	OS_Event_wait()	Wait Event.

7.2.3 MsgQ

MsgQ model includes create, destroy, send, receive.

Table 10 MsgQ APIs

No.	API function	Description
1	OS_MsgQ_create()	Create a MsgQ, and return value is MsgQ handle.
2	OS_MsgQ_destroy()	Destroy a MsgQ.
3	OS_MsgQ_send()	Send a msg
4	OS_MsgQ_recv()	Recv a msg

7.2.4 Mutex

Mutex model includes create, destroy, lock, unlock.

Table 11 Mutex APIs

No.	API function	Description
1	OS_Mutex_create()	Create a Mutex, and return value is Mutex handle.
2	OS_Mutex_destroy()	Destroy a Mutex.
3	OS_Mutex_lock()	Lock a Mutex.
4	OS_Mutex_unlock()	Unlock a Mutex.

7.2.5 Sem

Sem model includes create, destroy, post, wait.

Table 12 Sem APIs

No.	API function	Description
1	OS_Sem_create()	Create a Sem, and return value is Sem handle.
2	OS_Sem_destroy()	Destroy a Sem.
3	OS_Sem_post()	Post a Sem.
4	OS_Sem_wait()	Wait a Sem.

7.2.6 Mem

Mem model includes alloc, free.

Table 13 Mem APIs

No.	API function	Description
1	OS_Mem_alloc()	Alloc memery.
2	OS_Mem_alloc_zero()	Alloc memery, and set space to 0.
3	OS_mem_alloc_uncached() ()	Alloc uncached memery.
4	OS_mem_alloc_uncached _zero()	Alloc uncached memery, and set space to 0.
5	OS_Mem_free()	Free memery.
6	OS_Mem_zero()	Set memery space to 0.
7	OS_Mem_copy()	Copy src memery to dst memery.

7.2.7 Interrupt

Interrupt model includes install isr.

Table 14 Int APIs

No.	API function	Description
1	OS_install_isr()	Install isr function.
2	OS_intr_init()	Init interrupt priority, and disable or enable interrupt.

Appendix

A. USB host stack tasks

There are three tasks as follow:

Task name	Priority macro	Priority value
EHCI task	USB_EHCI_HOST_TASK_PRIORITY	6
HUB task	USBCFG_HUB_TASK_PRIORITY	7
KHCI task	USBCFG_HOST_KHCI_TASK_PRIORITY	8

Note: For RTOS, application unblocked tasks' priorities should be lower than the above priority.

B. Revision History

This table summarizes revisions to this document.

Table 1 Revision History		
Revision number	Date	Substantial changes
1	04/2015	Kinetis SDK 1.2.0 release
0	12/2014	Kinetis SDK 1.1.0 release

How to Reach Us:

Home Page:

www.freescale.com

Web Support:

www.freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: freescale.com/SalesTermsandConditions.

Freescale, Kinetis, and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

©2015 Freescale Semiconductor, Inc.